



SPY MOTION ALARM™

Invisible Beam Sensor!

Ages 6 & up
70041

Requires 2 AAA (LR03)
batteries, not included.

**Important: Please save this instruction sheet.
It contains valuable product information.**

TO OPERATE SPY MOTION ALARM

- Place Spy Motion Alarm next to a door or in a hallway with the invisible beam crossing the path.
- The alarm is light sensitive and works best in bright light conditions (Fig. 1).
- Turn on the alarm. The red LED will flash after 3 seconds to indicate the alarm is set.
- To adjust the back width of the beam, move the adjuster in for detecting a wide area and out for a narrower area.
- If alarm does not sound, it could be due to low light level or the beam is not set properly. Test the alarm by moving your hand in front of the beam.
- The alarm will sound for 2 to 3 seconds indicating the alarm is set.
- After activation, the alarm will reset automatically.
- Turn alarm off when not using to prolong battery life.

ADULTS: TO REPLACE BATTERIES

- Requires 2 AAA (LR03) batteries, not included.
- Use a small Phillips screwdriver to loosen the screw and remove battery compartment cover. (Fig. 2)
- NOTE: Screws will not detach from battery compartment cover.
- Place batteries in the compartment as shown.
- Replace battery compartment cover and tighten screws.

BATTERY SAFETY INFORMATION

- Only adults should install and replace batteries.
- Do not recharge non-rechargeable batteries.
- Remove dead or exhausted batteries.
- Insert batteries correctly. Match positive and negative signs.
- The supply terminals are not to be short circuited.
- Do not use rechargeable batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only the batteries of the same or equivalent type are recommended to be used.
- Do not dispose of batteries in a fire; they may explode.
- Dispose of batteries safely.

Warning: Changes or modifications to these units not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This unit has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This unit generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this unit does cause harmful interference to radio or television reception, which can be determined by turning the unit off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the unit and receiver.
- Connect the unit into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

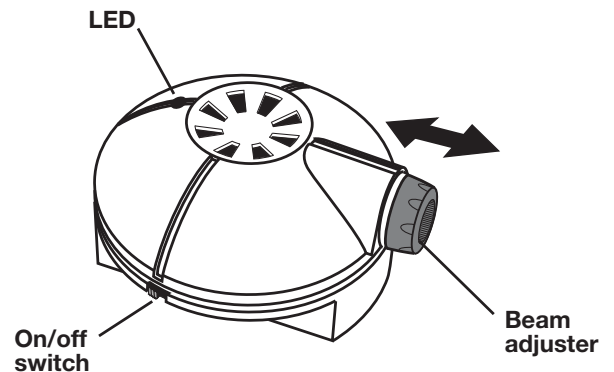 


Fig. 1

 
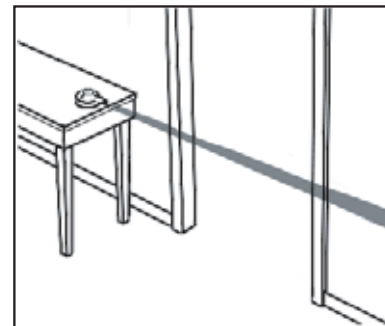 


Fig. 2



SPY MOTION ALARM 70041-4000 04/09

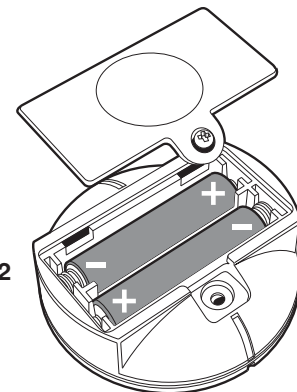

IF YOU HAVE ANY QUESTIONS, PLEASE CONTACT US AT
1-800-247-6570
WWW.WILDPLANET.COM/HELP
Wild Planet Entertainment, Inc., P.O. Box 420
San Francisco, CA 94104-0420

© 2009 Wild Planet Entertainment, Inc.,
San Francisco, CA 94104, USA.
All rights reserved. **PRINTED IN CHINA.**
Product specifications subject to change.