



SPY HANDCUFFS™

Breakaway Handcuffs with Motion Alarm

Ages 6 and up
70314

Important: Please save this instruction sheet. It contains valuable product information.

WARNING:
CHOKING HAZARD—Small parts.
Not for children under 3 years.

PREPARING TO USE SPY HANDCUFFS

- Remove the pull tab from the battery compartment.
- Activate the handcuffs by removing and re-inserting the ACTIVATION KEY (Fig. 1). The green LED ACTIVATION LIGHT will light up to indicate that the handcuffs are on.

CAPTURING INTRUDERS

- Open the handcuffs and secure them around the wrists of your intruder. The activation key should still be inserted in the handcuffs.
Note: the handcuffs do not lock.

MOTION ALARM

- Pull out the activation key (Fig. 2) to activate the MOTION ALARM. The red LED ALARM LIGHT will blink to indicate that the motion alarm is armed.
- When your captive triggers the motion alarm, it will begin sounding.
- Once triggered, the alarm will shut off after six seconds.
- To shut off the alarm manually and release your captive, insert the activation key.

ACTIVATION KEY / WHISTLE

The activation key has four functions:

- Activates the handcuffs
- Activates the motion alarm
- Shuts off the motion alarm
- Doubles as a whistle. Blow the whistle to alert your spy team if your captive tries to escape!

Note: If you lose the activation key, you can still use Spy Handcuffs. Here's how:

- To wake the handcuffs from sleep mode, insert a paper clip, house key or screwdriver into the lock and gently press the button. The green LED activation light will glow. When you release the button, the red LED alarm light will blink to indicate that the motion alarm is on.
- To shut off the alarm, insert a paper clip, house key or screwdriver into the lock, hold down the button for 3 seconds (until the green LED activation light blinks) then release. The handcuffs will go into sleep mode.

QUICK RELEASE FEATURE

For your safety, the handcuffs do not lock. To break the handcuffs open, simply pull your wrists apart. (Fig. 3).

ADULTS: REPLACING BATTERIES

- Use three 386 (LR43) batteries, included.
- Locate the battery door and use a small Philips screwdriver to loosen the screw.
- Remove the battery door. Discard both old batteries and install 3 fresh, new cells. Replace door. (Fig. 4)

Important: Observe battery polarity (direction, + and -)

BATTERY SAFETY INFORMATION

- Requires three 386 (LR43) batteries.
- Only adults should install and replace batteries.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Non-rechargeable batteries are not to be recharged.
- Remove dead or exhausted batteries.
- Insert batteries correctly. Match positive and negative signs.
- The supply terminals are not to be short circuited.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only the batteries of the same or equivalent type recommended to be used.
- Do not dispose batteries in a fire; they may explode.
- Dispose of batteries safely.

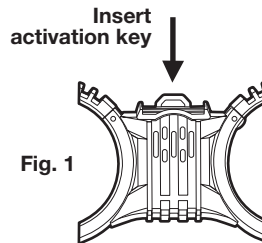 
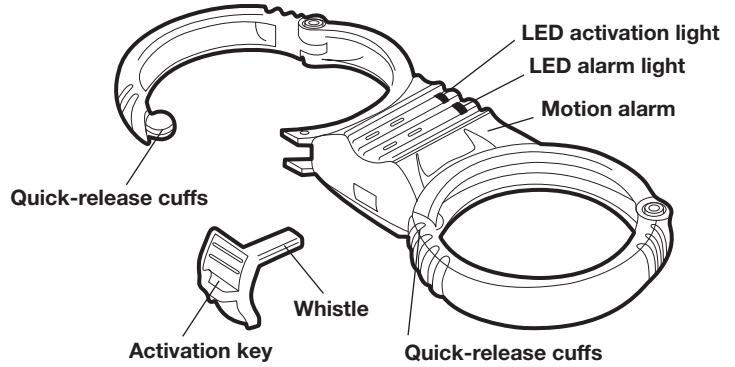 


Fig. 1

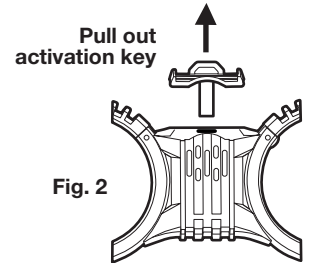 


Fig. 2

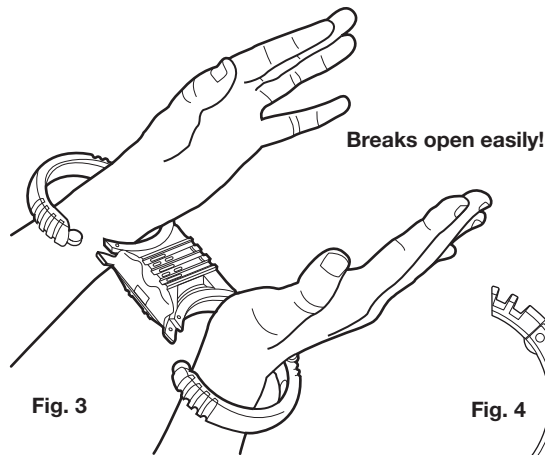 


Fig. 3

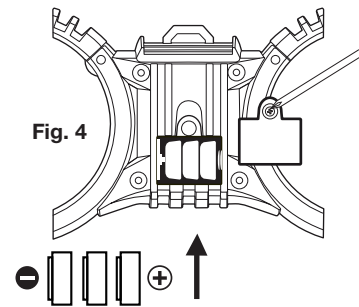 


Fig. 4

Warning! Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This unit has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This unit generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this unit does cause harmful interference to radio or television reception, which can be determined by turning the unit off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the unit and receiver.
- Connect the unit into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.



SPY HANDCUFFS 70314-4000 PS 07/09

IF YOU HAVE ANY QUESTIONS, PLEASE CONTACT US AT
1-800-247-6570
WILDPLANET.COM/HELP
Wild Planet Entertainment, Inc., P.O. Box 194087
San Francisco, CA 94119-4087