



# Sea Talkies™

2-way walkie-talkies

**Important:** Please save this instruction sheet. It contains valuable product information.

Patrick and SpongeBob love to chat all day long. Give your best friend one of these Sea Talkies, and you both can too!

1. Move the On/off switch to the "on" position. (Both units must be ON to function properly.)
  2. Press the talk button to speak
  3. Release talk button to hear your friend speak.
- You will hear underwater bubble sounds along with their voice!

**IMPORTANT:**

1. Do not use these walkie-talkies underwater!
2. Switch power off when finished playing.

**Battery Information:**

Requires two 9 volt (6LR61) batteries (not included).

**Battery safety:**

- Only adults should install and replace batteries.
- Do not recharge non-rechargeable batteries.
- Remove dead or exhausted batteries.
- Insert batteries correctly. Match positive and negative signs.
- Do not place anything across the battery terminals.
- Only use the batteries specified above.
- Do not use rechargeable batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Do not dispose of batteries in a fire; they may explode!
- Dispose of batteries safely.

**To install the batteries:**

1. Use a small Phillips head screwdriver to loosen the screw in the battery compartment door on the back of the unit (fig. 1).
2. Install batteries as shown.
3. Replace the battery compartment door by sliding the tabs into the holes and tightening the screw.

*Stephen Hillenburg*

© 2003 Viacom International, inc. All Rights Reserved. Nickelodeon, SpongeBob SquarePants and all related titles, logos and characters are trademarks of Viacom International Inc.



SEA TALKIES 54002-4000 PR 04/04

IF YOU HAVE ANY QUESTIONS, PLEASE CONTACT US AT  
1-800-247-6570  
WWW.WILDPLANET.COM  
©2003 Wild Planet Toys, Inc.

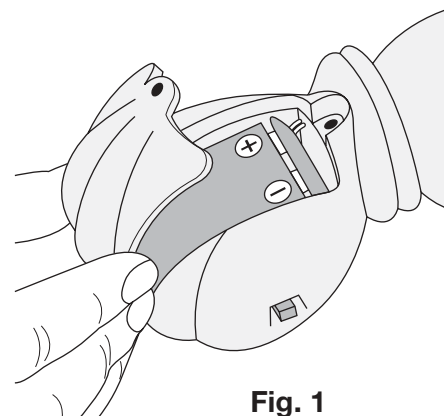
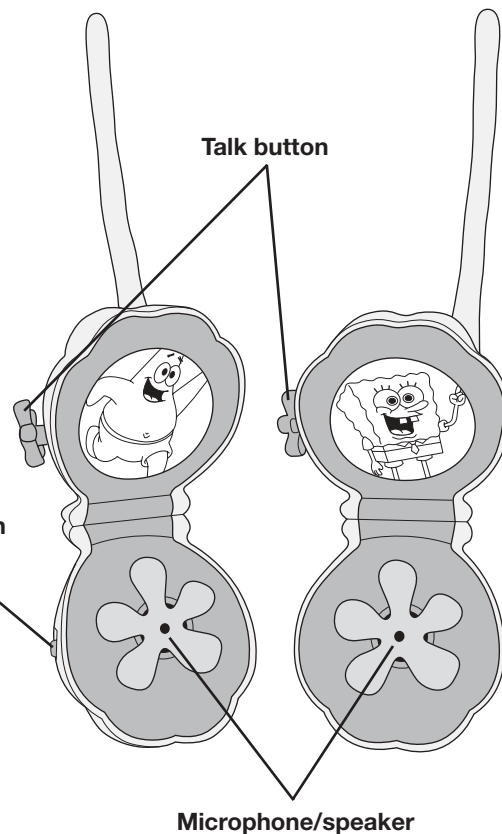


Fig. 1

FCC ID: N3ESBSEATALK54002

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.  
49.860 MHz  
0.2mW (50 OHM)

**⚠ WARNING:**

**CHOKING HAZARD: Small Parts. Not for Children Under 3 Years.**

**Warning:** Changes or modification to this toy that are not expressly approved by Wild Planet Toys, Inc. could void the user's authority to operate the toy.