



VOICE SCRAMBLER™

RECORDER WITH VOICE WARPERS

Ages 6 and Up
70055

Requires 3 357
(LR44) button cell
batteries, included.

KEEP THESE INSTRUCTIONS. DO NOT DISCARD.


IMPORTANT: SEE REVERSE SIDE PRIOR TO USE

FEATURES

- Electronically records up to 6 seconds of sounds or voice.
- Message plays back twisted by moving the TWIST button.
- Batteries included.


TO OPERATE VOICE SCRAMBLER

- Press and hold REC button to record. You will hear 1 beep. Hold 2 inches from mouth and speak directly into the MIC. Release when you hear 2 beeps.
- For best results, make sure TWIST button is in center position.
- Press PLAY button once to play back recorded message.
- While message is playing, slide TWIST button back and forth to twist and disguise your recorded message.
- For more fun, continue to hold the PLAY button and move the TWIST button while the message is playing. Message repeats over and over.
- And for even more fun, press the PLAY button repeatedly and move the TWIST button while the message is playing. Message restarts when PLAY is pressed.

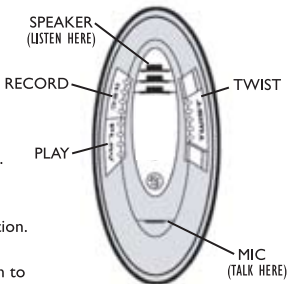

BATTERY INFORMATION

- Only adults should install and replace batteries.
- Three (3) 357(LR44) (G13-A equivalent) batteries required for replacement.
- Alkaline batteries recommended for longer life.
- Do not use rechargeable batteries.
- Do not recharge non-rechargeable batteries.
- Remove exhausted batteries from the toy.
- Insert batteries matching the correct polarity.
- Do not short-circuit the battery supply terminals.
- Do not mix alkaline, carbon zinc or rechargeable batteries.
- Do not mix old and new batteries.
- Only use batteries of the same or equivalent type.
- Do not dispose batteries in a fire: they can explode.
- Dispose of batteries safely. Recycle where available.

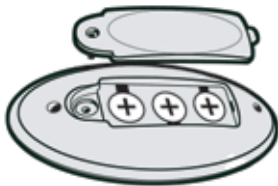

PARENTS: TO INSTALL BATTERY

- Use a Phillips screwdriver to loosen the battery door screw.
- Note that this screw will not remove from the battery door.
- Remove the battery door and used batteries.
- Insert new batteries per the marking on the battery door.
- Replace the battery door and tighten screw.



WARNING:

CHOKING HAZARD: Small Parts.
Not for Children Under 3 Years.

VOICE SCRAMBLER 70055-4000-G4 11/07

IF YOU HAVE ANY QUESTIONS, PLEASE CONTACT US AT
1-800-247-6570
WWW.WILDPLANET.COM/HELP
Wild Planet Entertainment, Inc., P.O. Box 194087
San Francisco, CA 94119-4087