



ULTIMATE SPY WATCH™

 
8 GADGETS FOR ALL MISSIONS

Ages 6 and Up
70230

Requires 1 CR2032
button-cell battery,
included

WARNING:
CHOKING HAZARD – Small Parts
Not for children under 3 years

Important: Please save this instruction sheet.
It contains valuable product information.

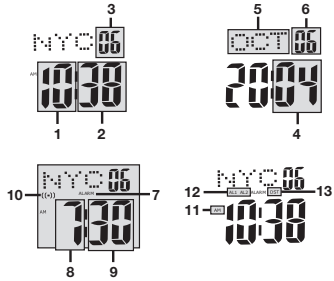

IMPORTANT:
IF WATCH FUNCTIONS ARE NOT PROPERLY DISPLAYED,
REMOVE BACK AND FOLLOW STEPS IN FIG. 5.

TO SET TIME, DATE, ALARM, 24 HOUR TIME

Press and hold <A> button for 2 seconds to enter setup mode. Then press <A> to cycle through the settings. For each setting, use <C> to advance the number, to decrease.

- Press <A>: HOUR [1] will flash.
- Press <A>: MINUTES [2] will flash.
- Press <A>: SECONDS [3] will reset to zero. (No advance/decrease)
- Press <A>: YEAR [4] will flash.
- Press <A>: MONTH [5] will flash.
- Press <A>: DAY [6] will flash.
- Press <A>: ALARM [7] screen appears. Press to toggle alarm on and off (the icon appears/disappears).
- Press <A>: ALARM HOUR [8] will flash.
- Press <A>: ALARM MINUTES [9] will flash.
- Press <A>: To select time hour mode.
- Press : To select 12-hour or 24-hour time mode (When in 12-hour mode, AM or PM will appear). [11]
- Press <A>: To quit set mode.

NOTE: Ultimate Spy Watch will return to normal time mode after 5 seconds without input.

TO SET DAYLIGHT SAVING TIME

 
- Press and hold for 2 seconds to activate Daylight Savings Time function [13].
- Repeat to disable Daylight Savings Time.

TO SET MOTION ALARM


- Press <C> and hold for 2 seconds to enter sensor mode.
- The sensor icon appears [10]. Wait 5 seconds for sensor to activate: will flash.
- Place watch around your doorknob, your backpack or bike—anything you don't want messed with!
- When disturbed, the alarm sounds and the time stamp records the time of movement so you know precisely when the security breach occurred.
- Press MODE button to access AL1 and AL2 [12]. You will see the time of the breach.
- Press and hold SENSOR for 2 seconds to quit sensor mode. disappears.

TO USE THE STOPWATCH

- Press <A> and <C> together: STW icon appears.
- Press <C> to start / stop the timer.
- While stopped, press to reset to zero.
- Press <A> to quit stopwatch mode.

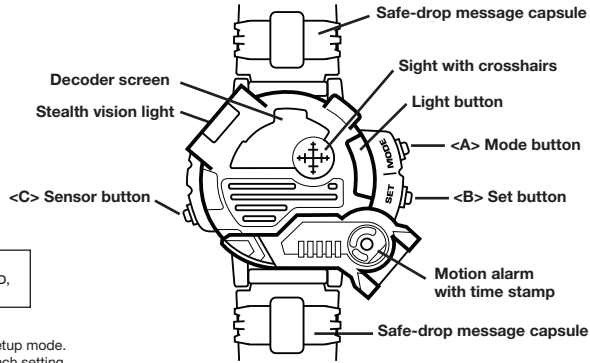

OPENING THE ARMOR

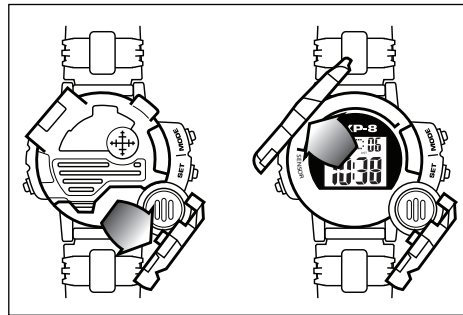 

TO CHECK WORLD TIME: Press or <C> to change city.

CITY	BKK
CODE	Delhi, India
Tokyo, Japan	DEL
TYO	Riyadh, Saudi Arabia
Seoul, South Korea	RUH
SEL	Moscow, Russia
Beijing, China	MOW
PEK	Cairo, Egypt
Hong Kong	CAI
HKG	Helsinki, Finland
Singapore	HEL
SIN	Rome, Italy
Bangkok, Thailand	ROM

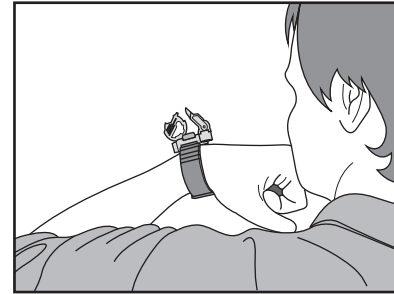 


Fig. 1

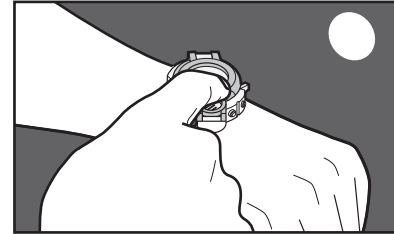 


Fig. 2

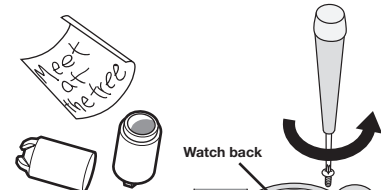 


Fig. 3

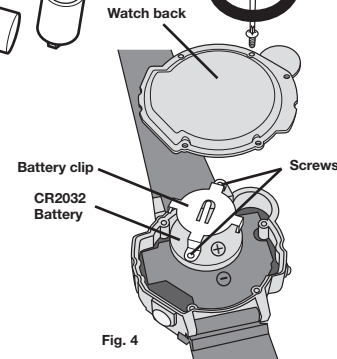 


Fig. 4



Fig. 5

DECODER SCREEN

The decoder screen can reveal secret messages written **IN PENCIL** on the included secret paper.

STEALTH VISION LED SPOTLIGHT

Press the **LIGHT BUTTON** to activate the night vision spotlight (Fig. 2).

SAFE-DROP CAPSULES

Hide tiny messages inside, then stash them in secret locations (Fig. 3).

ADULTS! REPLACING THE BATTERY

We recommend taking the Ultimate Spy Watch to a jeweler or watch-repair store to have the battery changed.

BATTERY SAFETY INFORMATION

- Only adults should install and replace batteries.
- Do not recharge non-rechargeable batteries.
- Remove dead or exhausted batteries.
- Insert batteries correctly. Match positive and negative signs.
- The supply terminals are not to be short-circuited.
- Do not use rechargeable batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only the batteries of the same or equivalent type recommended to be used.
- Do not dispose of batteries in a fire; they may explode.
- Dispose of batteries safely.

ATTENTION ADULTS—TO REPLACE BATTERIES

- The Ultimate Spy Watch requires 1 (CR2032) 3V lithium button-cell battery.
- Loosen the Phillips-head screws on the **WATCH BACK** and remove (Fig. 4).
- Loosen the 2 **SCREWS** on the **BATTERY CLIP**. Remove the battery and the clip together.
- Unclip old battery. Install new battery + side up
- Replace and screw the battery and clip assembly onto the circuit board.
- Replace the watch back and tighten screws. Be careful not to overtighten.
- Reset Ultimate Spy Watch by inserting a bent wire such as a paper clip thru the slot shown in Fig. 5 until it stops. Press firmly to reset watch.

NOTE: Ultimate Spy Watch may experience memory loss if subjected to an

WARNING: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.



ULTIMATE SPY WATCH 70230-4000-G3 08/07

IF YOU HAVE ANY QUESTIONS, PLEASE CONTACT US AT
1-800-247-6570
wildplanet.com/help
©2006 Wild Planet Entertainment, Inc.
P.O. Box 194087 San Francisco, CA 94119-4087