

WHAT'S YOUR DESTINY?

Requires 3 L1154
(LR44) 1.5V button
cell batteries, included.

WARNING:
CHOKING HAZARD – Small Parts
Not for children under 3 years

Important: Please save this instruction sheet.
It contains valuable product information.

TELLING YOUR FORTUNE IS AS EASY AS 1-2-3!

1. Pick 4 **CATEGORIES** of your “future facts” that you want to know about (**HOME, LOVE, WORK, etc.**)
2. For each category, select 4 **CHOICES** (Live in a **MANSION**, Marry a **JOCK**, Be a **DANCER**, etc.) that you want the electronic fortune-teller to choose from.
3. When you're finished choosing, just **SPIN THE WHEEL** and see your fortune!



WHAT'S YOUR DESTINY?™ CATEGORIES

HOME Will you live in a mansion, apartment, shack, house?

LOVE Who will you marry?

LIVE Which city will you live in?

CAR What will you drive?

PET What kind will you have?

WEDDING Where will yours be?

MONEY Will you be rich or poor?

WORK What will your job be?

POPULAR How popular will you be?

HOW TO PLAY


1. To turn unit on, press NEW GAME. (Unit will shut off automatically after a few minutes if no controls are touched.) You will see:

Welcome! Your Destiny Is Waiting... Pick 1st Category

Then:

HOME

2. HOME is the first CATEGORY on the list. Turn the SELECTOR WHEEL with your thumb to scroll to the first CATEGORY you want, then press GO.

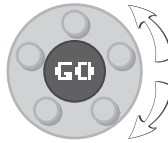

3. You will see:

Pick 4...

4. Spin the wheel to scroll to the CHOICE you want, then press GO. The CHOICE you have made will be highlighted. Repeat this step to make 4 CHOICES.
5. When you make your 4th CHOICE, the highlight will blink, indicating you have completed all your CHOICES in this category. You will see:

Go to keep, Back to change.

6. Press GO to keep your CHOICES and pick the next CATEGORY.
7. Press BACK to go back to change your CHOICES. To un-select a CHOICE you have already made, scroll to it and press GO. The highlight will disappear, and you can pick another CHOICE.
8. Continue picking CATEGORIES and CHOICES until you have completed 4 CATEGORIES. You will see:

Done! Go to keep, Back to change.

9. Press GO. You will see:

Spin the Wheel to See Your Destiny!

10. Spin the wheel and the fortune-teller will start the process of predicting your future. The tension builds! When it's done, you will see:

Your Future is Set!

11. Your fortune will now scroll by (You will marry a jock, etc.) and repeat until you press NEW GAME to start over.

TIP: While picking CATEGORIES or CHOICES, you can skip any displays and go directly to the lists without waiting, by pressing GO.

ENTERING YOUR OWN NAMES IN THE "LOVE" CATEGORY

1. You can enter your own names for up to 3 CHOICES in the "LOVE" CATEGORY. Scroll down until you see:

[Add Your Own]

2. Press GO. You will see:

Spin to Pick Letters. Pick OK When Done.

3. Spin the wheel and press GO to fill in letters in the blanks.

- Press BACK to backspace and change a letter.
- Scroll to the empty space and press GO to leave a blank space between words in your entry (to enter someone's first and last names, for example).

4. Scroll to "OK" when you have finished entering each name and press GO. Then spin to make another CHOICE.

QUICK PICK

To see your fortune INSTANTLY without having to make any picks, press QUICK PICK, then spin the wheel.

- If you have already picked some CATEGORIES and CHOICES, but not all, pressing QUICK PICK will keep your picks, plus others the unit will make by itself, and immediately start to tell your fortune.

TURNING SOUND OFF AND ON

When you press NEW GAME and see the Welcome message, press the BACK button to turn the sound off. Press again to turn sound back on.

CARRY LOOP


Pull open the CARRY LOOP and use it to hang WHAT'S YOUR DESTINY from your purse, backpack or belt.

BATTERY SAFETY INFORMATION

- Only adults should install and replace batteries.
- Do not recharge non-rechargeable batteries.
- Remove dead or exhausted batteries.
- Insert batteries correctly. Match positive and negative signs.
- The supply terminals are not to be short circuited.
- Do not use rechargeable batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only the batteries of the same or equivalent type recommended to be used.
- Do not dispose of batteries in a fire; they may explode.
- Dispose of batteries safely.

ATTENTION ADULTS: TO REPLACE BATTERIES

1. Use a small Phillips head screwdriver to loosen the screw on the battery compartment.
2. Remove battery cover and all 3 exhausted batteries.
3. Place 3 fresh, new batteries in compartment with "+" sides facing up as shown.
4. Replace battery cover and tighten screw.

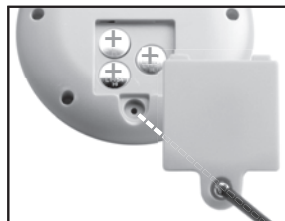

Removable button cell battery in this product contains mercury. When battery is replaced, don't put used one in trash. Recycle or dispose of according to local, state, or federal laws.

Caution: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.



WHAT'S YOUR DESTINY? 43002-4000 PR 3/07

IF YOU HAVE ANY QUESTIONS, PLEASE CONTACT US AT
1-800-247-6570

WWW.WILDPLANET.COM/HELP

Wild Planet Entertainment, Inc., P.O. Box 194087
San Francisco, CA 94119-4087

©2006 Wild Planet Entertainment, Inc.,
San Francisco, CA 94104, USA. All rights
reserved. **PRINTED IN CHINA.**
Product specifications subject to change.