



DODGE DISCS™

Ages 6 and Up
30003

You can dodge-but you can't hide!

**Important: Please save this instruction sheet.
It contains valuable product information.**

BEFORE USING DODGE DISCS

1. Remove the 2 ZIP TIES that secure the discs in each chamber. (Fig. 1)
2. Snap the GRIP HANDLE into place on each launcher. Listen to ensure both sides snap loudly into place. Once in place, it is permanently attached. (Fig. 1)

GAME PLAY

Fire at your opponent while dodging his discs. (Fig. 2) Use your launcher as a shield to block incoming shots and keep him from scoring! (Fig. 3)

HOW TO USE YOUR LAUNCHER

1. Load up to 10 DISCS in the CHAMBER and close the lid.
2. Move POWER SWITCH to ON
3. Take aim and squeeze the TRIGGER to launch a disc.
4. Squeezing the trigger rapidly will launch multiple discs.
5. Use the back portion of your launcher as a shield to deflect incoming discs.
6. When finished playing, set the power switches on both launchers to OFF.
7. When performance fades it is time to change the batteries.

TIP: When not firing, keep your shield up so you are always ready to block!

NOTE: The launcher will not fire discs properly if held sideways or upside down.

GAME VARIATIONS

Dodge n Block: Each disc that hits the other player is worth 1 point for a maximum score of 10. The player with the highest score wins.

Dodge Tag: One player is IT and chases the other player until tagging them with a disc. Then turn and run, because now they are trying to tag you!

Target Shoot: Pick a distant target and try to land a disc in or on it. The player who lands the most discs wins!

Practice: Set up a row of empty soda cans and try to knock them down. As your skills improve, try launching from farther and farther away.

TIP: With practice you can develop an arm-swing motion that lets you go from blocking to shooting and back to blocking quickly.

IMPORTANT

- Only Dodge Discs will fit in the chamber. Use of other types of discs may jam the launcher.
- Lose a disc? Dodge Disc refill packs are available at www.shopwildplanet.com

WARNING-PLAY SAFE!

- Do not aim your launcher at anyone's face or eyes.
- Never load anything in the disc chamber besides Dodge Discs.

BATTERY SAFETY INFORMATION

- Requires four AA (LR06) batteries, not included.
- Only adults should install and replace batteries.
- Do not recharge non-rechargeable batteries.
- Do not use rechargeable batteries.
- Remove dead or exhausted batteries.
- Insert batteries correctly. Match positive and negative signs.
- Do not place anything across the battery terminals.
- Only use the batteries specified above.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Do not dispose of batteries in a fire; they may explode.
- Dispose of batteries safely.

ATTENTION ADULTS: TO REPLACE BATTERIES

Dodge Discs requires four AA (LR06) batteries, not included.

1. Use a small Phillips head screwdriver to loosen the screw on the battery compartment.
2. Open battery cover. Remove exhausted batteries.
3. Place 2 new AA (LR06) batteries in compartment of each unit as shown (Fig. 4).
4. Replace the battery cover and tighten screw.



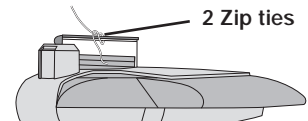


Fig. 1

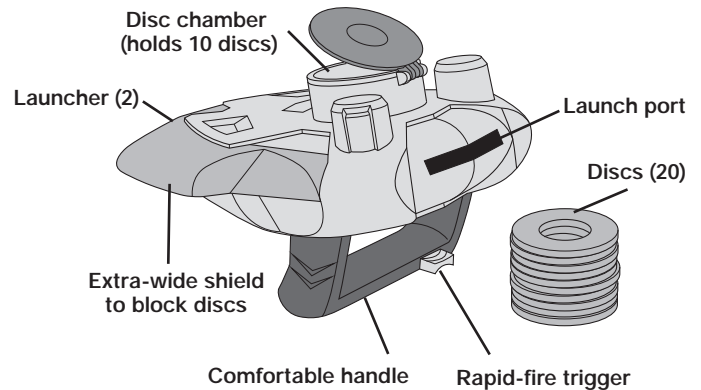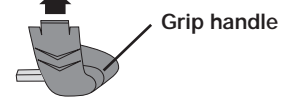

Launch!



Fig. 2

Block!



Fig. 3

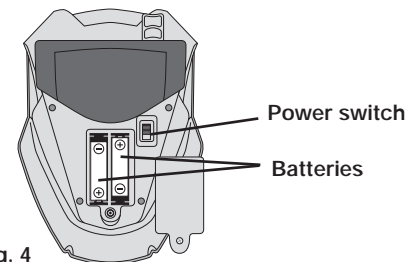


Fig. 4

DODGE DISCS 30003-4000 PR8/05

IF YOU HAVE ANY QUESTIONS, PLEASE CONTACT US AT
 1-800-247-6570
 WWW.WILDPLANET.COM
 ©2005 Wild Planet Toys, Inc.
 P.O. Box 194087 San Francisco, CA 94119-4087

**Caution: Do not aim at eyes or face.
 Use only discs designed for this product.**

