



# Photo Gal\*lery™

Changeable photo wall

Ages 8 and Up  
85001

**Important: Please save this instruction sheet. It contains valuable product information.**

### Adults! Hanging Instructions

1. Hold Photo Gal\*lery up to the wall to check the fit - make sure it is level (Fig. 1)
2. Using a pencil, make a small mark in each of the top corner holes (Fig. 2).
3. To mount hooks: peel the adhesive backing, place the hook over your pencil mark and press firmly onto the wall (Fig. 3). [Note: Adults! When removing hooks, use a putty knife to prevent wall damage.]
4. Mount the two top hooks first and hang your Photo Gal\*lery.
5. Peel the third hook, place through the left bottom corner hole, and press hook and Photo Gal\*lery to your wall.
6. Repeat step 5 for the right bottom corner.
7. Now remove Photo Gal\*lery from the hooks and re-apply pressure to each hook to make sure they are firmly attached to the wall.
8. Replace Photo Gal\*lery onto its hooks. Now it is time to add your favorite photos!

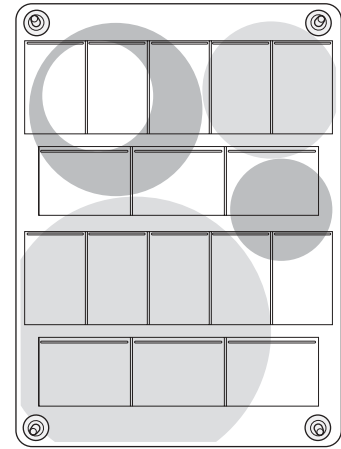


Fig. 1

### Placing Photos

Photo Gal\*lery pockets can hold all your favorite memories: pictures, postcards, concert tickets etc. Use the clear protective sleeves when placing photographs (Fig. 4). Otherwise, photos may stick to the plastic in humid conditions. To insert photo, hold pocket open. Curl photo and insert into the pocket as far as possible then let it flatten. Lay on a flat surface and press from the bottom to the top with your hand.

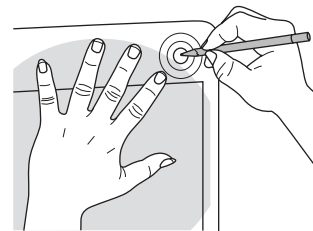 


Fig. 2

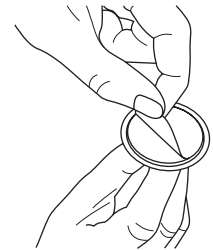 


Fig. 3

### To Personalize Your Photos

Select a caption from the sheet and apply it to the pocket of the photo you wish to personalize (Fig. 5). Stickers can be used over and over!

### Use the Spotlight to Highlight Your Favorite Photo

1. Slip the light into the pocket behind the photo and place the clip over the edge (Fig. 6).
2. Move the switch to the ON position.
3. When not using, turn light OFF to save batteries.

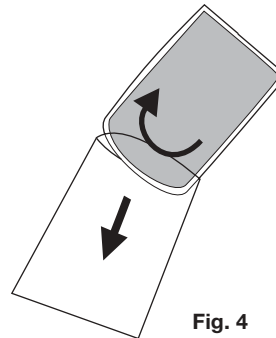 


Fig. 4



Fig. 5

### Adults! To Replace Batteries

Photo Gal\*lery's light requires two (2) G13-A (LR44) batteries (included).  
1. Use a small Phillips head screwdriver to loosen the screw in the battery compartment door on the back of the light. (Fig. 7)

NOTE: Screw will not detach from battery compartment door.

2. Remove old batteries. Insert 2 new batteries as shown by battery markings.
3. Replace the battery door and tighten screw.

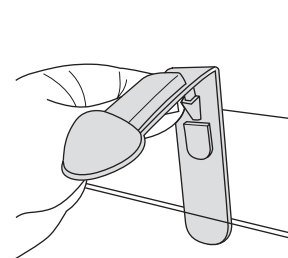 


Fig. 6

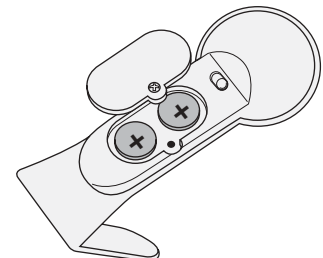


Fig. 7

### Battery Safety:

- Only adults should install and replace batteries.
- We recommend you use alkaline batteries.
- Do not recharge non-rechargeable batteries.
- Remove dead or exhausted batteries.
- Insert batteries correctly. Match positive and negative signs.
- Do not place anything across the battery terminals.
- Only use the batteries specified above.
- Do not use rechargeable batteries
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Do not dispose batteries in a fire; they may explode.
- Dispose of batteries safely. Recycle where available.
- Only the batteries of the same or equivalent type recommended to be used.
- The supply terminals are not to be short circuited.



PHOTO GAL\*LERY 85001-4000 PR 05/04

IF YOU HAVE ANY QUESTIONS, PLEASE CONTACT US AT  
1-800-247-6570  
WWW.WILDPLANET.COM  
©2003 Wild Planet Toys, Inc.