



LIGHT HAND

AGES 4 AND UP!

FINGER LIGHTS

IMPORTANT: Keep these instructions. DO NOT DISCARD.

- Requires one 3.0V CR2032 (or equivalent) button cell battery.
- Only adults should install and replace batteries.
- Alkaline batteries are recommended for longer life.
- Do not use rechargeable batteries.
- Non-rechargeable batteries are not to be recharged.
- Exhausted battery should be removed from the toy.
- Batteries should be inserted with the correct polarity.
- The supply terminals are not to be short-circuited.
- Only batteries of the same or equivalent type as recommended are to be used.

Light Hand Operation (Figure 1)

To turn the Light Hand on or off:

1. Press the on/off button located in the middle of the Light Hand.
2. After approximately 5-7 minutes the Light Hand will automatically shut off by itself. To turn it back on when this happens, press the on/off button.

Installing the Batteries

The Light Hand requires one CR2032 (3.0 Volt DC) button cell battery. To install the battery:

1. Remove the screw from the battery door using a small Phillips screwdriver. (Figure 2)
2. Pry off the battery door.
3. Remove the old battery and discard.
4. Insert the new battery positive (+) side up. (Figure 3)
5. Replace the battery door and the screw.

Care

Take care of your Light Hand. Avoid dropping, bumping or smashing it. Do not immerse it in water or get it wet.

Light Hand
10168-4000-4L 2/99
Wild Planet Toys, Inc.

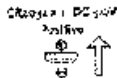
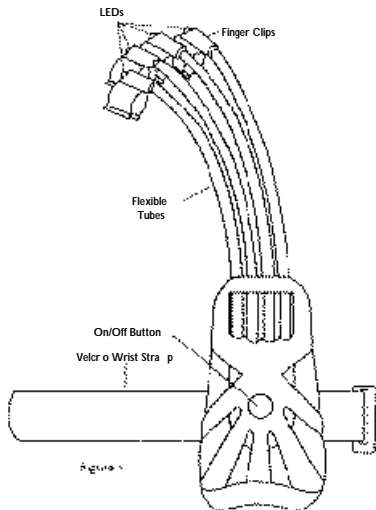


Figure 3

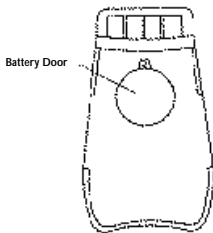


Figure 2

 **WARNING:**

**CHOKING HAZARD: Small Parts
Not for Children Under 3 Yrs.**