



Hook Fortune Finder™

Metal Detector with Pirate Coins

Important: Please save this instruction sheet. It contains valuable product information.

PLAYING WITH YOUR HOOK FORTUNE FINDER

1. **ADULTS:** Install the battery (see below for directions).
2. Locate the **ON/OFF/SENSITIVITY DIAL** located on the skull teeth. Using your thumb, turn the dial to the left so the switch clicks on and the **LED POWER LIGHT** turns on.
3. Adjust sensitivity dial to the left until the unit emits a continuous beep. Turn the dial back to the right just to the point the beep stops.
4. **MOVABLE HOOK/SENSOR** works best when it is parallel to the ground. Rotate movable hook/sensor to the desired angle (Fig.1).

SAFETY

- Hand cover does not provide protection.
- Never poke or hook people or animals with your Hook Fortune Finder.

BATTERY INFORMATION



The Hook Fortune Finder requires one 9V (6LR61) battery, not included.

ATTENTION ADULTS: TO REPLACE BATTERIES

1. Use a small Phillips head screwdriver to loosen the screw on the battery compartment. The screw will not fall out.
2. Open battery cover. Remove exhausted batteries.
3. Connect new battery making sure to match polarity symbols (+/-) and slide battery into compartment as shown in Fig. 2.
4. Replace the battery cover and tighten screw.

BATTERY SAFETY INFORMATION

- Only adults should install and replace batteries.
- Do not recharge non-rechargeable batteries.
- Remove dead or exhausted batteries.
- Insert batteries correctly. Match positive and negative signs.
- The supply terminals are not to be short-circuited.
- Do not use rechargeable batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only the batteries of the same or equivalent type recommended to be used.
- Do not dispose batteries in a fire; they may explode.
- Dispose of batteries safely.

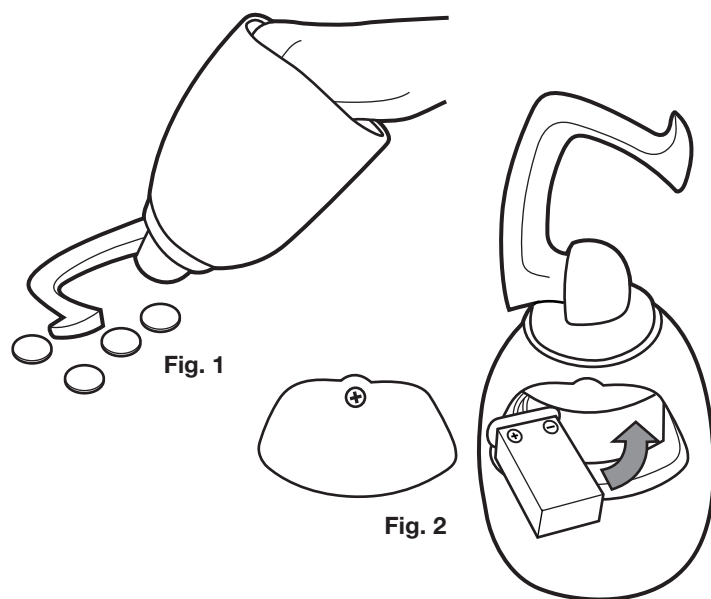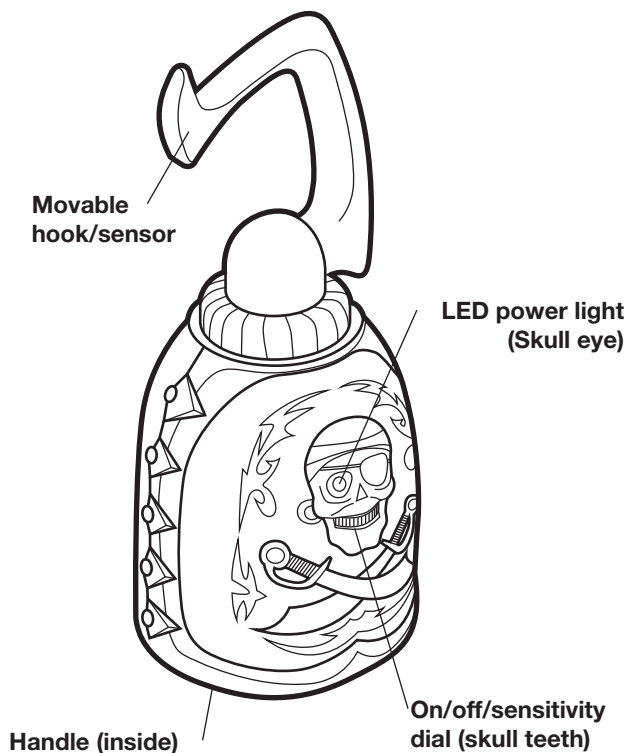

WARNING: This is a toy. Not for use in climbing or any other load bearing activities.



HOOK FORTUNE FINDER 52101-4000 PR 04/06

IF YOU HAVE ANY QUESTIONS, PLEASE CONTACT US AT
 1-800-247-6570
 WWW.WILDPLANET.COM
 ©2006 Wild Planet Toys, Inc.
 P.O. Box 194087 San Francisco, CA 94119-4087

WARNING:
 CHOKING HAZARD—Small parts.
 Not for children under 3 years.