



# PIRATE SWORD™

## Sound Effects Sword

Ages 4 and up  
52103

**Important: Please save this instruction sheet. It contains valuable product information.**

### TO ACTIVATE SOUNDS:

1. Press the **SOUND BUTTON** to cycle through the four spoken sounds.
2. Press and hold the sound button while waving the sword in the air to activate “swoosh” sword-fight sound effects.
3. Press and hold the sound button while striking the sword against a target to activate “clank” sword-fight sound effects.

### SAFETY

Never hit, jab, or poke people or animals with your sword!

### BATTERY INFORMATION

The Pirate Sword requires three G13-A (LR44) button cell batteries, included.

### ATTENTION ADULTS: TO REPLACE BATTERIES



1. Use a small Phillips head screwdriver to loosen the screw on the battery compartment. The screw will not fall out.
2. Open battery cover. Remove exhausted batteries.
3. Place new batteries in compartment as shown (Fig. 1).
4. Replace the battery cover and tighten screw.

### BATTERY SAFETY INFORMATION

- Only adults should install and replace batteries.
- Do not recharge non-rechargeable batteries.
- Remove dead or exhausted batteries.
- Insert batteries correctly. Match positive and negative signs.
- The supply terminals are not to be short circuited.
- Do not use rechargeable batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only the batteries of the same or equivalent type recommended to be used.
- Do not dispose batteries in a fire; they may explode.
- Dispose of batteries safely.

### Mercury battery warning

Removable button cell battery in this product contains mercury. When battery is replaced, don't put used one in trash. Recycle or dispose according to local, state, or federal laws.

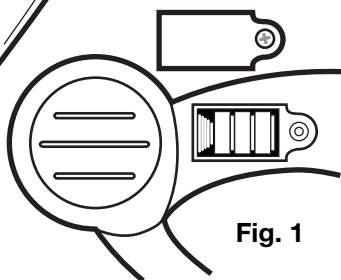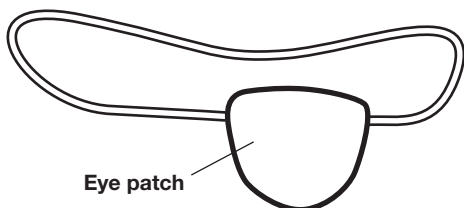

**WARNING:** Your vision is impaired when wearing the eye patch. Never run with the eye patch covering your eye!



PIRATE SWORD 52103-4000 PR 5/06

IF YOU HAVE ANY QUESTIONS, PLEASE CONTACT US AT  
1-800-247-6570  
WWW.WILDPLANET.COM  
©2006 Wild Planet Toys, Inc.  
P.O. Box 194087 San Francisco, CA 94119-4087

**WARNING:**  
CHOKING HAZARD—Small parts.  
Not for children under 3 years.