



# Krusty Krab Cash Register™

Ages 4 and up  
54000

Working cash register with play  
money and credit card.  
Ring up orders with SpongeBob's help!

**Important: Please save this instruction sheet.  
It contains valuable product information.**

### Adults: Set up shop!

1. Insert the batteries (see below).
2. Assemble the sign by inserting its frame into the slot on top of the register.
3. Slide the switch on the bottom of the register to ON.  
(Note: the "try-me" switch position excludes some features and is not recommended for play.)

### Kids: Get down to business!

**To place an order:** press the food buttons to hear SpongeBob call out your order.

**To use the microphone:** press and hold the sea shell while you speak into the mic.

**To open the cash drawer:** press the big green \$ button.

**To hear the number keypad:** press the number buttons.

**To "charge it":** swipe the credit card along the card-reader.

### Closing Time!

1. Put all the money and the credit card back in the register and close the drawer.
2. Slide the switch at the bottom of the register to OFF.

### Battery Information:

Requires three AAA (LR3) batteries (not included).

### Battery Safety:

- Only adults should install and replace batteries.
- Do not recharge non-rechargeable batteries.
- Remove dead or exhausted batteries.
- Insert batteries correctly. Match positive and negative signs.
- Do not place anything across the battery terminals.
- Only use the batteries specified above.
- Do not use rechargeable batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Do not dispose of batteries in a fire; they may explode!
- Dispose of batteries safely.

### Attention Adults:

- Krusty Krab Cash Register™ comes with a "try-me" battery that must be removed before regular use. Regular use requires 3 AAA (LR03) batteries.
- Removeable "try-me" battery box is not a toy. It should be removed only by an adult before use.

### To install/replace the batteries:

1. Use a small Phillips head screwdriver to loosen the screw in the battery compartment door on the bottom of the register (fig. 1).
2. Locate the yellow try-me battery.
3. Remove this battery and install new 3 AAA (LR03) batteries.
4. Replace the battery compartment door by sliding the tabs into the holes and tightening the screw.


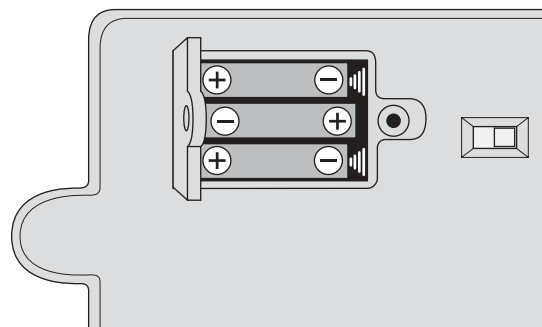


Fig. 1

*Stephen Hillenburg*

© 2003 Viacom International, inc. All Rights Reserved.  
Nickelodeon, SpongeBob SquarePants and all related  
titles, logos and characters are trademarks of Viacom  
International Inc.

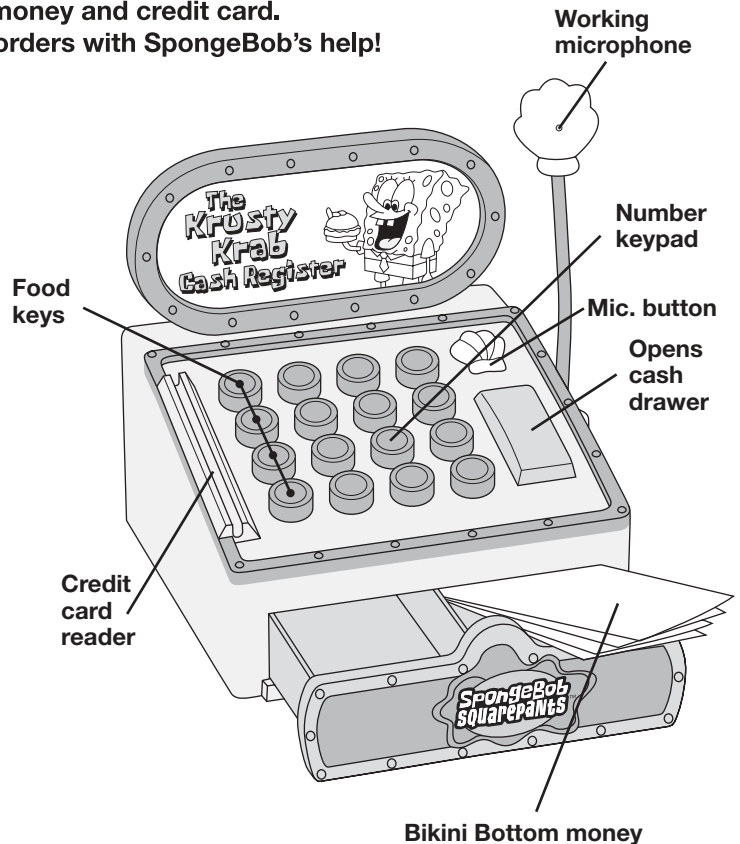

KRUSTY KRAB CASH REGISTER 54000-4000-G1 05/04

IF YOU HAVE ANY QUESTIONS, PLEASE CONTACT US AT  
1-800-247-6570  
WWW.WILDPLANET.COM  
©2003 Wild Planet Toys, Inc.  
P.O. Box 194087 San Francisco, CA 94119-4087



**WARNING:**

**CHOKING HAZARD: Small Parts.  
Not for Children Under 3 Years.**