



SATELLITE LISTENER

TRIPOD-MOUNT LISTENING DEVICE

Ages 6 and Up
70214

Requires 1 9V (6LR61)
battery, not included.

Important: Please save this instruction sheet. It contains valuable product information.

GETTING READY

1. Snap DISH onto unit as shown (Fig. 1).
2. Swing legs down from their folded position on the bottom of unit.
3. Note how **EAR BUD** and **CORD** are stored in **STORAGE COMPARTMENT**, with cord running along **GROOVE** on **BATTERY DOOR** (Fig. 2). Open storage compartment door and remove ear bud and cord.

ADULTS: INSTALLING BATTERIES

1. Using a small Phillips screwdriver, loosen screw and remove **BATTERY DOOR** (Fig. 3).
2. Unsnap old battery.
3. Snap a fresh, new battery onto **BATTERY CLIP**.
IMPORTANT: Observe battery polarity (direction, + and -)
4. Place battery into battery compartment, making sure wire and clip are neatly tucked inside.
5. Replace battery cover and tighten screw.

MISSION USE

1. Satellite Listener can be used as a handheld device, or placed on the ground, a table or shelf.
2. Swing open the sound reflection **PANELS** on the dish.
3. The dish swivels up and down to aim.
4. Set the Listener down, or hold it steady by the handle. Aim the dish directly at the sound source.
5. Place ear bud in your ear and turn the **ON/OFF/VOLUME CONTROL** until it clicks. Red **LED LIGHT** inside dish will glow.
6. Slowly turn up the volume to a comfortable level.

Note: Unit has an automatic volume limiter circuit to prevent very loud sounds from coming through the ear bud.

Note: Conditions around you, such as distance, background noise and wind, may affect the range, loudness and clarity of the sound amplification. If you are having trouble hearing sounds, move closer, adjust your aim, or wait until conditions improve.

MISSION COMPLETE

1. Always turn off the power after each use to preserve battery life.
2. Neatly wind up the cord and place it and the ear bud in the storage compartment on the bottom of the unit. Place cord into groove on battery door.
3. Fold the legs up and close the sound reflection panels.
4. Swing the dish up into the storage position.

BATTERY SAFETY

1. Only adults should install and replace batteries.
2. Do not recharge non-rechargeable batteries.
3. Remove dead or exhausted batteries.
4. Insert batteries correctly. Match positive and negative signs.
5. The supply terminals are not to be short circuited.
6. Do not use rechargeable batteries.
7. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
8. Do not mix old and new batteries.
9. Only the batteries of the same or equivalent type recommended to be used.
10. Do not dispose of batteries in a fire; they may explode.

WARNING: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

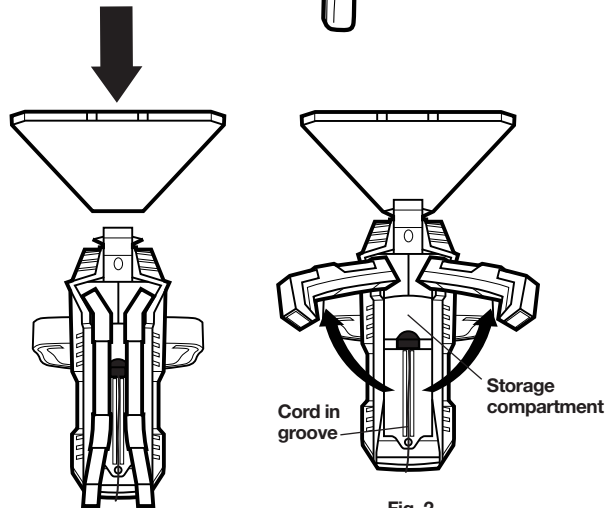 
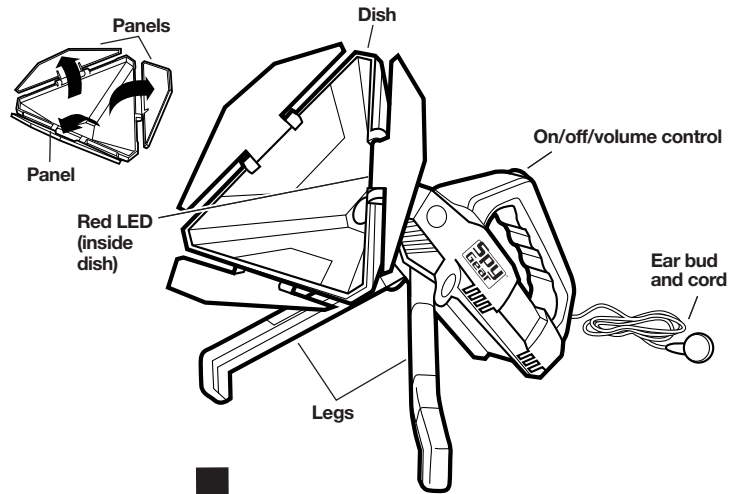 


Fig. 1

Fig. 2

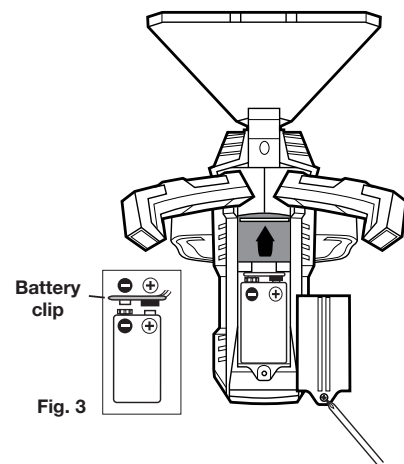 


Fig. 3



SATELLITE LISTENER 70214-4000 PR 8/07

IF YOU HAVE ANY QUESTIONS, PLEASE CONTACT US AT
1-800-247-6570
WILDPLANET.COM/HELP
Wild Planet Entertainment, Inc., P.O. Box 194087
San Francisco, CA 94119-4087