

Important: Please save this instruction sheet. It contains valuable product information.

READ THESE IMPORTANT SAFETY INSTRUCTIONS BEFORE USE

- FOR OUTDOOR USE ONLY.
- USE ONLY IN OPEN SPACES.
- KEEP FACE AND FINGERS AWAY FROM FRONT OF LAUNCHER.
- NEVER AIM ROCKETS AT A PERSON OR ANIMAL, OR ANYWHERE VALUABLE OR BREAKABLE OBJECTS MIGHT BE DAMAGED.
- LANDING AREA SHOULD BE FREE OF PEOPLE AND ANIMALS.
- NEVER FIRE LAUNCHER HORIZONTALLY (STRAIGHT AHEAD). ALWAYS FIRE VERTICALLY (UP IN THE AIR).

ASSEMBLY

Press 3 **CLIPS** into top, left side and right side **HOLES** on launcher until they snap into place (Fig 1).

ROCKET STORAGE

Press rockets into clips to store them on launcher.

LOADING

1. Slip the rocket all the way on the **LAUNCHER POST** (Fig 2).

Note: When loading Red Alert signal, make sure **WARNING STREAMERS** hang freely and do not get tucked between rocket and launcher post.

2. Pump the **HANDLE** several times to charge the launcher.

Note: You cannot over-pump the launcher. After maximum charge is reached, additional pumps will release air and will not increase the charge.

LAUNCHING

1. Hold launcher with one hand on bottom grip and other hand on rear grip. Aim launcher in the air, away from people, animals, or valuable or breakable objects.
2. Use your thumb to press the **LAUNCH BUTTON** to launch rocket (Fig 3).
3. Rocket will soar into the air and make a whistling sound so your fellow agents are alerted.
4. Practice aiming your launches at the correct angle so that rockets soar into the air and land in the desired landing area.

Note: Wind, temperature and other factors may affect the height, distance, and loudness of the rockets.

MESSAGE CARRIER ROCKET

Write a **MESSAGE** on a small slip of paper. Wrap it neatly

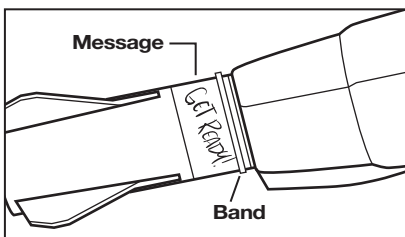 


Fig. 4

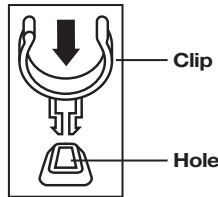 
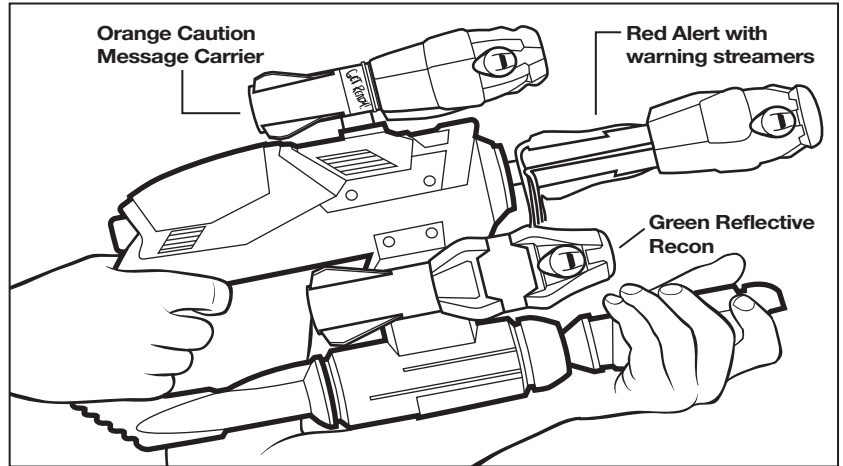 


Fig. 1

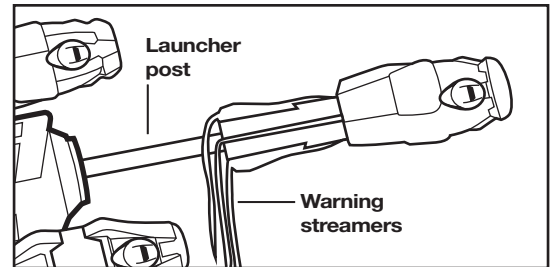 


Fig. 2

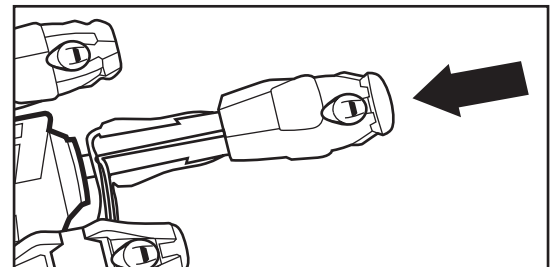 


Fig. 2a

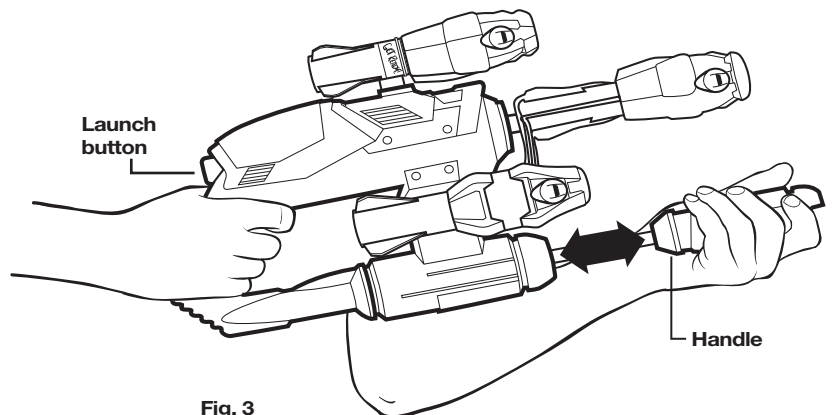 


Fig. 3

CAUTION: Do not aim at eyes or face. To avoid injury: use only signal rockets designed for this product. Do not modify signal rockets or launcher.



SIGNAL LAUNCHER 70218-4000 PR 8/07

IF YOU HAVE ANY QUESTIONS, PLEASE CONTACT US AT 1-800-247-6570

WWW.WILDPLANET.COM/HELP
Wild Planet Entertainment, Inc., P.O. Box 194087
San Francisco, CA 94119-4087

© 2007 Wild Planet Entertainment, Inc., San Francisco, CA 94104, USA. All rights reserved. **PRINTED IN CHINA.**
Product specifications subject to change.