

Spy Lazer Chase™

Catch spies with a Lazer Blast!

Important: Please save this instruction sheet. It contains valuable product information.

How to put on Spy Lazer Chase:

1. Players wear one Lazer Chase unit (on either hand).
2. Place your middle finger through the finger loop (Fig. 2)
3. Strap the unit to your wrist. Use the buckle to secure the strap (Fig. 3).

How to play:

1. Switch each wrist unit's power on. The red LED will glow.
2. Now join the chase! Duck, run and hide—just flex your fist to send invisible light beams to stun your opponent.
3. When one of you is hit, your wrist unit will make a "crash" noise and the red LED will blink. With each hit, the LED blinks more slowly to indicate energy loss.
4. On the 5th hit, your Lazer Chase unit will beep 5 times, meaning you are nearly done for!
5. The 6th and final hit makes a loud explosion sound.
6. Hit reset to play again.
7. Switch the power off when done playing. (Lazer Chase will automatically shut off after a while if you forget.)
8. When performance fades it is time to change the batteries (see below.)

CHASE TIP:

Hide behind objects that can shield you but still allow you to fire, like large houseplants!

SAFETY NOTE: Spy Lazer Chase units operate with harmless infrared light beams. It is not a true laser product.

Battery Information:

Spy Lazer Chase requires 6 G-13A (LR 44) 1.5V button cell batteries (included).

Battery Safety:

- Only adults should install and replace batteries.
- Do not recharge non-rechargeable batteries.
- Remove dead or exhausted batteries.
- Insert batteries correctly. Match positive and negative signs.
- Only use the batteries specified above.
- Do not use rechargeable batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Do not dispose of batteries in a fire; they may explode!
- Dispose of batteries safely.
- Only the batteries of the same or equivalent type recommended to be used.
- The supply terminals are not to be short circuited.

Adults! To Replace Battery:

1. Using a small Phillips screwdriver, remove the battery cover (Fig. 1).
2. Remove the old batteries with a small screwdriver.
3. Insert the new batteries.

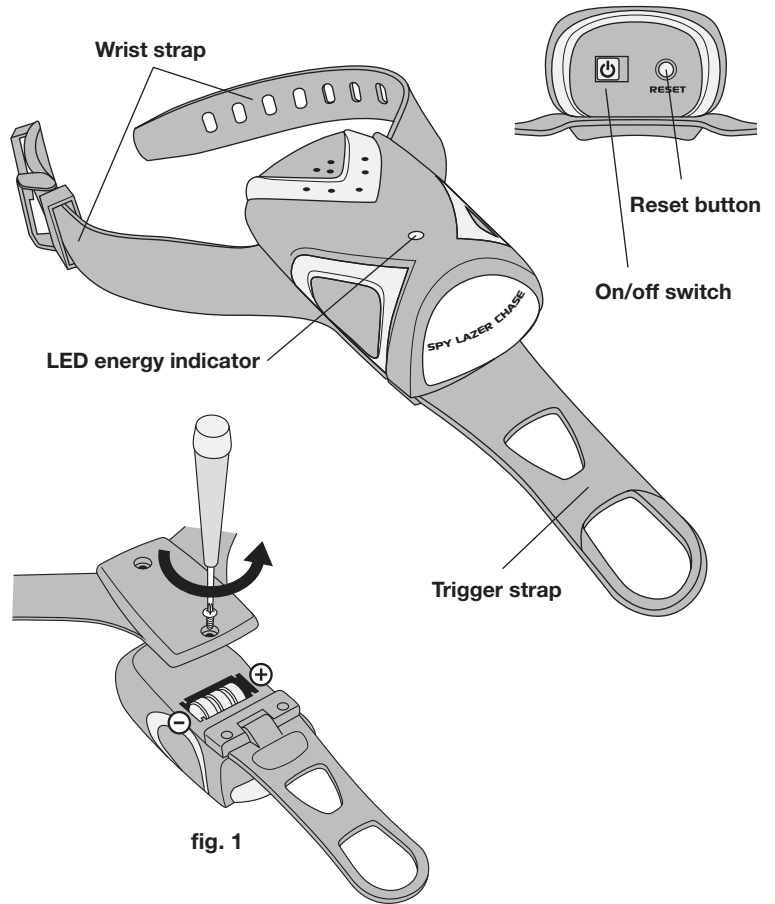


fig. 1

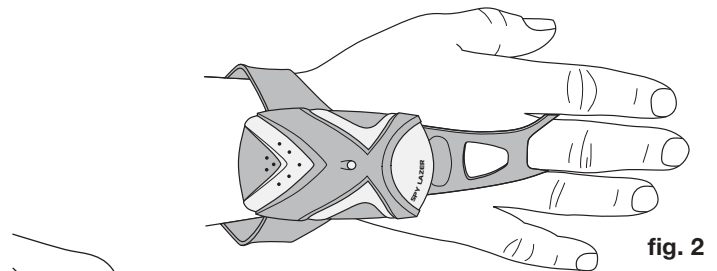


fig. 2

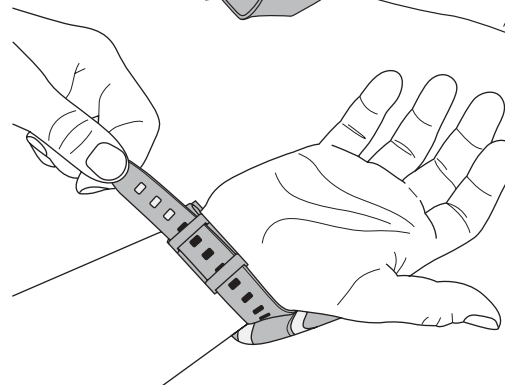


fig. 3



SPY LAZER CHASE 70083-4000-G1 06/04

IF YOU HAVE ANY QUESTIONS, PLEASE CONTACT US AT
1-800-247-6570
WWW.WILDPLANET.COM
©2003 Wild Planet Toys, Inc.
P.O. Box 194087 San Francisco, CA 94119-4087