

Important: Please save this instruction sheet. It contains valuable product information.

Spy Gear Consumer Service is ready to assist you!
DO NOT RETURN THE PRODUCT TO THE STORE!
USE OUR TOLL-FREE CONSUMER HELPLINE
1-800-247-6570
WWW.WILDPLANET.COM/HELP

PREPARING TO DRIVE THE SPY VIDEO CAR

1. ADULTS: Install the batteries in the **SPY VIDEO CAR** and **REMOTE CONTROL** (see below for directions).
2. Turn on the Spy Video Car using the **ON/OFF SWITCH** located on the bottom of the car between the rear wheels. (Fig. 1)
3. Use the **ON/OFF SWITCH** to turn on the remote control. (Fig. 2)
4. Put on the **SPY HEADSET** so the **FLIP-UP VIDEO SCREEN** is in front of your right eye.
5. Connect the spy headset to the remote control by plugging the **CORD** into the **VIDEO FEED PLUG**.

DRIVING WITH THE REMOTE CONTROL

1. Use the **FORWARD/REVERSE CONTROL** to drive the car forward and reverse it. (Fig. 2)
2. Use the **LEFT/RIGHT CONTROL** to turn the car left and right. (Fig. 2)

SEEING & DRIVING WITH YOUR SPY VIDEO CAR

1. Make sure the power is ON on both the car and the remote control.
2. Put on your spy headset and look into the video screen. You should see what the camera on the car is seeing.
3. Looking into the screen on the headset, use the **FORWARD/REVERSE** and **LEFT/RIGHT CONTROLS** to drive the car into places where you cannot see.
4. Use the screen in the headset to make sure the car does not run into anything and to see all the action going on in other places.
5. The video camera adjusts up and down to give you a wider field of vision. (Fig. 3) Remember to adjust the camera before you send the Spy Video Car on a mission.

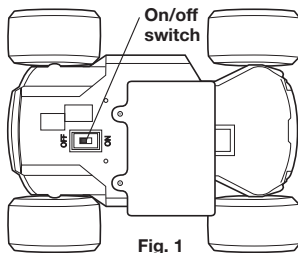 
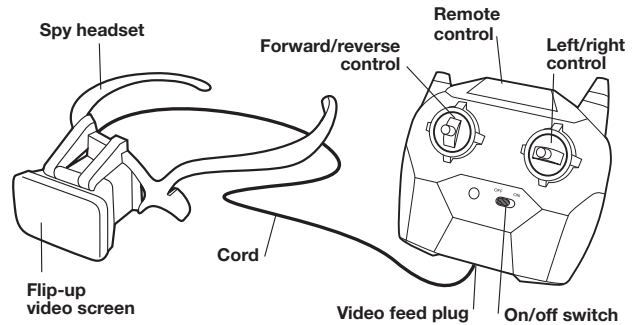 
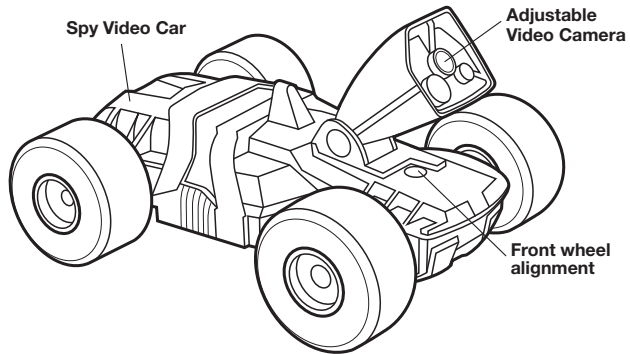 


Fig. 1

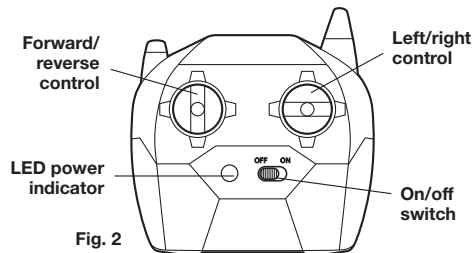 


Fig. 2

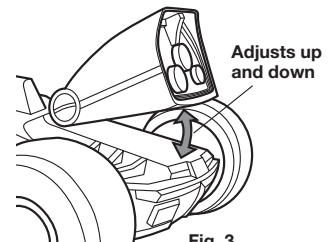 


Fig. 3

SAFETY

- Don't drive the Spy Video Car in sand or through water (even small puddles) or snow. (Fig. 4)
- To avoid damage to the video camera or internal electronics, do not drive the Spy Video Car off curbs or down stairs. (Fig. 5)
- Don't store the Spy Video Car near heat or in direct sunlight.
- Always turn switches OFF and remove all batteries for storage.
- Warning! Use under the direct supervision of an adult.
- Never drive the Spy Video Car on real streets.
- Keep fingers, hair, and loose clothing away from the tires while the vehicle is switched on.
- With the video screen flipped down, your vision is impaired.
- Flip the screen UP when walking or moving. Never run while wearing the video headset,

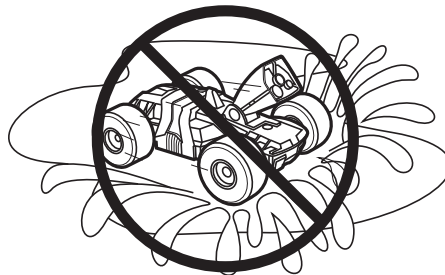 


Fig. 4

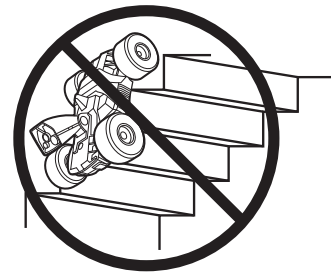 


Fig. 5

BATTERY INFORMATION

The Spy Video Car uses 12 AA (6 for the car and 6 for the remote) batteries, not included.

ATTENTION ADULTS: TO REPLACE BATTERIES

1. Use a small Phillips head screwdriver to loosen the screws on the battery compartment of both the car and the remote. The screws will not fall out.
2. Open battery cover. Remove exhausted batteries.
3. Place new batteries in compartment as shown in Fig. 6 and 7.
4. Replace the battery cover and tighten screw.

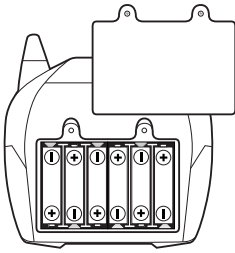


Fig. 6

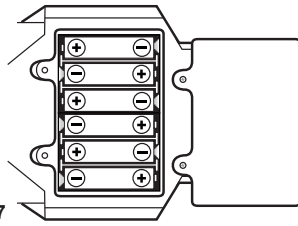


Fig. 7

BATTERY SAFETY INFORMATION

- Only adults should install and replace batteries.
- Do not recharge non-rechargeable batteries.
- Remove dead or exhausted batteries.
- Insert batteries correctly. Match positive and negative signs.
- The supply terminals are not to be short-circuited.
- Do not use rechargeable batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only the batteries of the same or equivalent type recommended to be used.
- Do not dispose batteries in a fire; they may explode.
- Dispose of batteries safely.

Caution: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC ID TX: N3EVIDEOCAR70133T RX: N3EVIDEOCAR70133R

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

TROUBLESHOOTING GUIDE

SYMPTOM	PROBABLE CAUSE	SOLUTION
The Spy Video Car will not operate.	The batteries are dead or have a low charge.	Replace the batteries and always remember to turn off the power switches on the car and remote control to save battery life when not in use.
	The batteries may not be installed correctly.	Make sure the battery direction (polarity, +/-) is correct.
	Power switches are OFF.	Make sure the power on the remote control and the car is ON.
The Spy Video Car slows down or the video screen starts to fade.	The batteries are dead or have a low charge.	Replace the batteries and always remember to turn off the power switches on the car and remote control to save battery life when not in use.
	The Spy Video Car is getting out of range.	Try holding the remote control higher above the ground. If that does not work, move closer to the car.
There is no image on the video screen.	The headset may not be properly connected to the remote control.	Make sure the headset cord connects into the video feed plug in the remote control.
	Power switches are OFF.	Make sure the power on the remote control and the car is ON.
The Spy Video Car is not traveling in a straight line.	The front wheel alignment may not be set correctly.	Adjust the front wheel alignment screw located on the car beneath the video camera. If the car turns to the right, turn the screw to the left and vice versa.
The Spy Video Car is moving about erratically, not under the control of the remote.	You are playing near areas with radio interference, other RC vehicles, high-tension wires, large buildings, CB radios.	Move to a new location.
	The Spy Video Car is out of range.	Try holding the remote control higher above the ground. If that does not work, move closer to the car.
	The batteries have a low charge.	Replace the batteries and always remember to turn off the power switches on the car and remote control to save battery life when not in use.
	The remote control antenna is not sending clear signals.	Point the remote control antenna up in the air, not at the car. Do not touch the antenna.
When I look in the video screen, everything looks white.	The Spy Video Car may be located in direct sunlight.	Move inside or to a shadier area outside.
The video screen is flickering a lot.	You are playing near an area with radio interference or a cordless phone.	Move to a new location.

Warranty Information:

Wild Planet Entertainment manufactures all of its products to the highest quality standards. We encourage you to take good care of your Spy Video Car and follow all the instructions carefully.

As a leader in quality products for kids, Wild Planet Entertainment guarantees the Spy Video Car to the original consumer purchaser against any manufacturing defects under normal use for 90 days from the date of purchase. In the event of a defect covered under this warranty, please call the toll-free number listed on the instruction sheet. Many problems can be solved by talking to our customer service department.

If necessary, you will be instructed to return your Spy Video Car postage pre-paid and insured to the Wild Planet Entertainment Service Center. Wild Planet Entertainment will repair or replace your Spy Video Car if it meets the terms of this warranty. You will need to include your name, address, a sales slip with the proof of purchase date and a brief explanation of the product defect. Replacement and return shipment will be free of charge. This warranty is exclusive and is made in lieu of any express or implied warranty.

This warranty does not cover broken parts or damage resulting from unauthorized modification, accident, abuse or misuse. If the product is returned without a dated sales receipt or if the product is returned outside of the warranty period, the product will not be covered under this warranty.



SPY VIDEO CAR 70133-4000 G2 3/07
 IF YOU HAVE ANY QUESTIONS, PLEASE CONTACT US AT
 1-800-247-6570
 WWW.WILDPLANET.COM/HELP
 Wild Planet Entertainment, Inc., P.O. Box 194087
 San Francisco, CA 94119-4087

© 2006 Wild Planet Entertainment, Inc., San Francisco, CA 94104, USA.
 All rights reserved. **MADE IN CHINA.**