

**Important: Please save this instruction sheet.
It contains valuable product information.**

HOW TO USE YOUR MICRO AGENT LISTENER

1. **Adults:** Be sure fresh **BATTERIES** are installed (see below).
2. Fit the **EAR CLIP** over your right ear.
3. Slide the **ON/OFF SWITCH** to **ON**.
4. You can use the Micro Agent Listener two ways:
 - Leave the **MICROPHONE** attached to the earpiece.
 - Unsnap the **MICROPHONE CUP** and unwrap the cord. (Fig. 1)
You can extend the cord up to 12 inches to listen around corners.
5. When finished spying, be sure to turn your Micro Agent Listener **OFF**.

TAKE CARE OF YOUR MICRO AGENT LISTENER

- Avoid dropping, bumping or smashing your Micro Agent Listener.
- Do not immerse Micro Agent Listener in water or get it wet.

BATTERY SAFETY INFORMATION

- Requires one LR44 button-cell battery, included.
- Only adults should install and replace batteries.
- Do not recharge non-rechargeable batteries.
- Remove dead or exhausted batteries.
- Insert batteries correctly. Match positive and negative signs.
- The supply terminals are not to be short circuited.
- Do not use rechargeable batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only the batteries of the same or equivalent type recommended to be used.
- Do not dispose batteries in a fire; they may explode.
- Dispose of batteries safely

ATTENTION ADULTS—TO REPLACE BATTERIES

The Micro Agent Listener requires one LR44 button-cell battery, included.

1. Use a small Phillips head screwdriver to loosen the screw on the battery compartment. The screw will not fall out.
2. Open battery cover. Remove exhausted battery.
3. Place new battery in compartment as shown (Fig. 2).
4. Replace the battery cover and tighten screw.

⚠ WARNING:

CHOKING HAZARD: Small Parts.
Not for Children Under 3 Years.

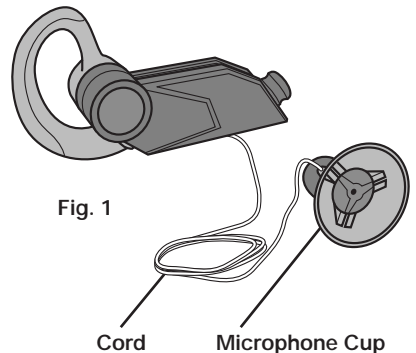
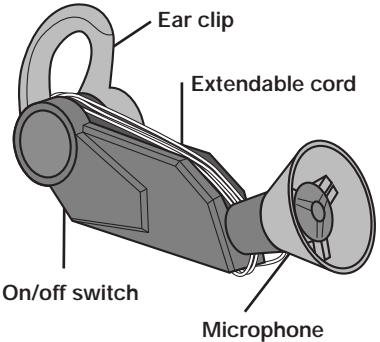


Fig. 1
Cord Microphone Cup

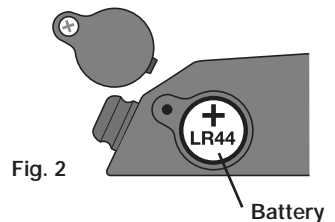


Fig. 2
Battery

MICRO AGENT LISTENER 70125-4000 PR 9/05

IF YOU HAVE ANY QUESTIONS, PLEASE CONTACT US AT
1-800-247-6570
WWW.WILDPLANET.COM
©2005 Wild Planet Toys, Inc.
P.O. Box 194087 San Francisco, CA 94119-4087

