

**Important: Please save this instruction sheet. It contains valuable product information.**

### HOW TO USE YOUR SECRET AGENT PEN (Fig. 1)

1. Remove **PEN CAP**.
2. Write your invisible message on a piece of paper.
3. You can write messages on any paper, including small scraps that you can hide and transport inside the **SECRET STORAGE** (see below).
4. Hide your message in a secret location, or pass it to a spy buddy to decode.
5. To decode the message, press and hold the **LIGHT SWITCH**. Shine the **DECODER LIGHT** at the message. The invisible message will be revealed.
6. Always replace pen cap when finished writing.

**Note:** If the cap is left off and the **PEN TIP** dries out, apply the tip to a damp sponge to moisten it.

**Tip:** Use the Secret Agent Pen to mark your stuff, like books and toys, so that no one can get away with stealing them!

### TO UNLOCK THE SECRET STORAGE (Fig. 1)

1. Slide the **LOCK** down.
2. Twist the top half of the pen counterclockwise until the tick mark lines up with the silver mark, then gently pull it apart.
3. The secret storage can be used to hide and store messages, extra paper, or other small items. One roll of paper is included.
4. To replace the cap, twist the pen back together and refasten the lock.

**Tip:** If you are having trouble fitting the paper inside your secret compartment, place the paper inside the pen tip side, then carefully put the two halves back together.




### BATTERY SAFETY INFORMATION

- Requires 3 (LR43) button-cell batteries, included.
- Only adults should install and replace batteries.
- Do not recharge non-rechargeable batteries.
- Remove dead or exhausted batteries.
- Insert batteries correctly. Match positive and negative signs.
- The supply terminals are not to be short circuited.
- Do not use rechargeable batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only the batteries of the same or equivalent type recommended to be used.
- Do not dispose batteries in a fire; they may explode.
- Dispose of batteries safely.

### ATTENTION ADULTS—TO REPLACE BATTERIES

The Secret Agent Pen requires 3 (LR43) button-cell batteries, included.

1. Use a small Phillips head screwdriver to loosen the screw on the battery compartment. The screw will not fall out.
2. Open battery cover. Remove exhausted batteries.
3. Place new batteries in compartment as shown (Fig. 2).
4. Replace the battery cover and tighten screw.

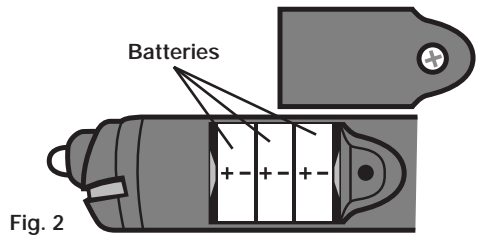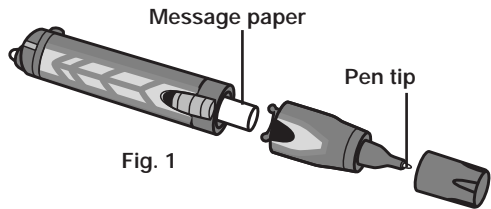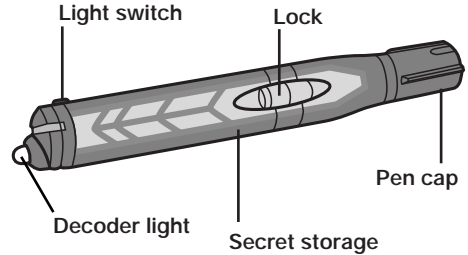

## WARNING:

**CHOKING HAZARD: Small Parts.**  
**Not for Children Under 3 Years.**

**CAUTION: Toy contains UV light.**  
**Do not stare directly into beam.**