



# TEK TAG™

Ages 6 and Up  
30000

## The ultimate game of balance and skill

**Important: Please save this instruction sheet.  
It contains valuable product information.**

### HOW TO PLAY TEK TAG

Defend your pod while trying to tag your opponent! Only a light tap is needed to score. A “whoosh” sound marks each successful hit.

#### Mode 1: Elimination

1. Move **POWER SWITCH** to Mode 1 (Fig. 1, 2).
2. Press **SET** button to begin with 5, 10, 15, 20 or 25 points.
3. Press **START**. A triple beep will sound. There is a 3 second delay in scoring to avoid false starts while you get ready.
4. Play defense! Protect your pod. Each “hit” subtracts a point from your pod (or your opponent’s)!
5. When the display reads “1”, the unit will beep indicating you are almost finished!
6. First player to reach zero points loses. In multiplayer games of 2 or more, the last one standing wins!
7. Press set to play again.

#### Mode 2: Timed

1. Move Power Switch to Mode 2 (Fig. 1, 3).
2. Press Set to choose game time (1-9 minutes)
3. Press Start. The rotating digit means the clock is running.
4. Try to score as many points as you can in the time available! Hits are automatically recorded and displayed when time has run out.
5. During the last 15 seconds of each minute the number will blink. For the final 15 seconds before the game ends, a warning beep will sound. You’re almost out of time!
6. When “endgame” sounds, the number of hits scored will be displayed on each unit. The player with the least points on their pod wins!
7. Max score on each unit is 99 points.

NOTE: Tek Tag pods do not have synchronized timers, so they may be off by several seconds, especially in longer games. The game is over when the first unit times out. Compare scores when both/all units have timed out.

### HOW TO WEAR THE TEK TAG POD (Fig. 4)

1. Loosen the **STRAP**.
2. Slide the unit over your wrist to your upper arm, facing outwards.
3. Tighten the strap to a comfortable tension and fasten it.

NOTE: If you play Tek Tag against Dad or another large adult, he may have to wear the pod on his wrist.

### OTHER USES OF TEK TAG

Use Tek Tag pods to enhance traditional games like Tag, Hide and Seek, Manhunt, Flag Football and Capture the Flag. Use your imagination, and tell us what you come up with!

### BATTERY SAFETY INFORMATION

- Requires six AAA (LR03) batteries, not included.
- Only adults should install and replace batteries.
- Do not recharge non-rechargeable batteries.
- Do not use rechargeable batteries.
- Remove dead or exhausted batteries.
- Insert batteries correctly. Match positive and negative signs.
- Do not place anything across the battery terminals.
- Only use the batteries specified above.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Do not dispose of batteries in a fire; they may explode.
- Dispose of batteries safely.

### ATTENTION ADULTS—TO REPLACE BATTERIES

Tek Tag requires six AAA (LR03) batteries, not included.

1. Use a small Phillips head screwdriver to loosen the screw on the battery compartment.
2. Open battery cover. Remove exhausted batteries.
3. Place 3 new AAA batteries in compartment of each unit as shown (Fig. 5).
4. Replace the battery cover and tighten screw.

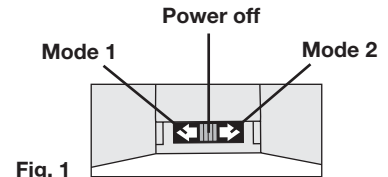 
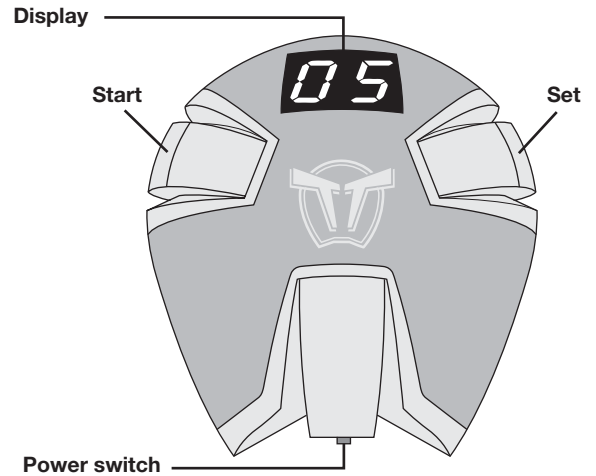 


Fig. 1



Fig. 2



Fig. 3

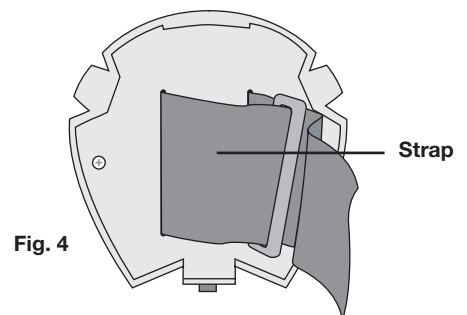 


Fig. 4

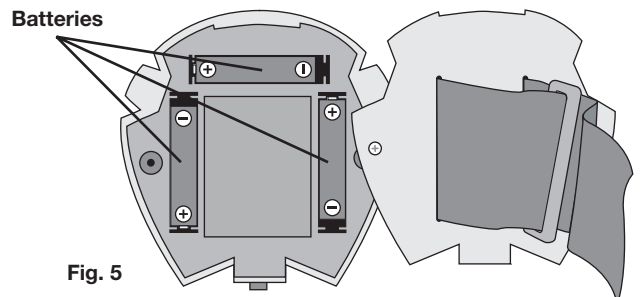 


Fig. 5



TEK TAG 30000-4000 PR 09/04

IF YOU HAVE ANY QUESTIONS, PLEASE CONTACT US AT  
1-800-247-6570  
WWW.WILDPLANET.COM  
©2004 Wild Planet Toys, Inc.  
P.O. Box 194087 San Francisco, CA 94119-4087

**WARNING:**  
CHOKING HAZARD: Small Parts.  
Not for Children Under 3 Years.