



YOUR VOICE ALARM™

Voice Playback Alarm Clock

Ages 8 and up
92009

Requires 3 AAA (LR03)
batteries, not included.

Important: Please save this instruction sheet. It contains valuable product information.

Setting the Time

1. Press the **MODE BUTTON** once. The clock digits will blink.
2. Press the **HR BUTTON** repeatedly until the correct hour is shown.
Note:The "PM" symbol will indicate afternoon and evening hours. No symbol will indicate morning hours.
3. Press the **MIN BUTTON** repeatedly until the correct number of minutes is shown.
4. Press the **MODE BUTTON** twice to finish.

Recording Your Personal Wake-Up Message

1. Think of a cool message that will wake you up!
Tip:Your message can be up to 3 seconds long.
2. Press and hold the **RECORD BUTTON**. Say your message clearly into the **BUILT-IN MICROPHONE**.
3. Release the Record button.
4. To check your message press the **PLAY BUTTON**.
5. To record a new message, repeat steps 1 to 4.

Setting the Alarm

1. Press the **MODE BUTTON** twice. The alarm digits will blink and the "AL" symbol will appear to indicate you are in alarm mode.
2. Press the **HR BUTTON** repeatedly to set the hour you would like the hour to sound.
Note:The "PM" symbol will indicate afternoon and evening hours. No symbol will indicate morning hours.
3. Press **MIN BUTTON** repeatedly until the correct number of minutes is shown.
4. Press the **MODE BUTTON** once.
5. Set the alarm by moving the **ALARM ON/OFF SWITCH** to the "ON" position.
6. When the alarm goes off the first time, your personal wake-up message will play!
7. To stop the alarm move the **ON/OFF BUTTON** to the "OFF" position OR press the **SNOOZE BUTTON** for 9 additional minutes of sleep.

Attention Adults — Installing Batteries

1. Use a small Phillips head screwdriver to loosen the screws in the **BATTERY DOOR** on the back of the clock.
2. Remove all 3 used batteries.
3. Insert 3 fresh, new batteries as shown (Figure 1).
4. Press the **RESET BUTTON** located in the battery compartment (Figure 2).
5. Replace battery door and tighten screws.

Battery Safety Information

1. Only adults should install and replace batteries.
2. Do not recharge non-rechargeable batteries.
3. Remove dead or exhausted batteries.
4. Insert batteries correctly. Match positive and negative signs.
5. The supply terminals are not to be short circuited.
6. Do not use rechargeable batteries.
7. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
8. Do not mix old and new batteries.
9. Only the batteries of the same or equivalent type recommended to be used.
10. Do not dispose of batteries in a fire; they may explode.
11. Dispose of batteries safely.

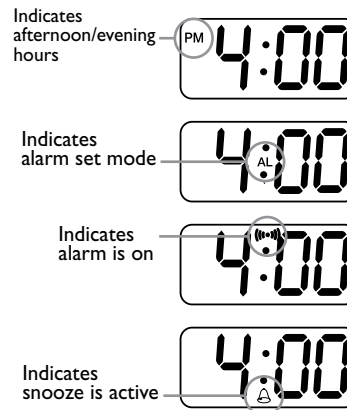
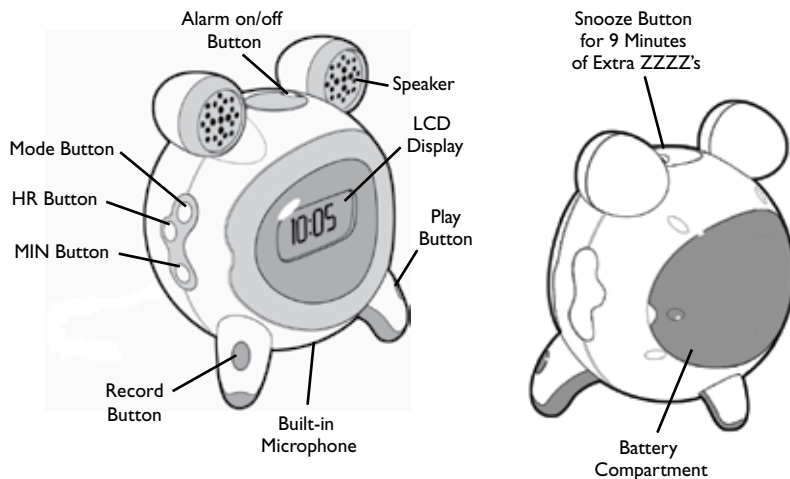


Fig 1

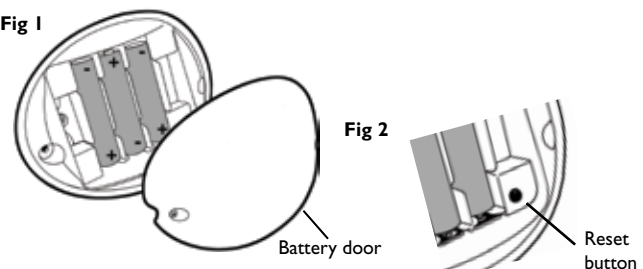


Fig 2

WARNING: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



YOUR VOICE ALARM 92009-4000 PR 1/07
IF YOU HAVE ANY QUESTIONS, PLEASE CONTACT US AT
1-800-247-6570
WWW.WILDPLANET.COM/HELP
Wild Planet Entertainment, Inc., P.O. Box 194087
San Francisco, CA 94119-4087

© 2006 Wild Planet Entertainment, Inc., San Francisco, CA 94104, USA. All rights reserved. **PRINTED IN CHINA.**
Product specifications subject to change.