

Launch Air Powered Darts with Secret Messages Inside!

**Important: Please save this instruction sheet. It contains valuable product information.**

**⚠ WARNING:**  
CHOKING HAZARD – Small Parts.  
Not for children under 3 years.

## ASSEMBLY

1. If the **AIMING SCOPE** comes off, snap it back onto the **AIR LAUNCHER** (Fig. 1)

## LOAD MESSAGE

1. Write a *small* message on the **SPY PAPER**. Tear the message off the roll. Use a Code Card (on back of package) if you want to encode your message. (Give the other Code Card to your fellow spy before the mission so he can decode the message when he gets it.)

**Note:** An adult should cut the Code Cards from the package.

2. Select a **DART** color according to the urgency of the message. Black = Top Secret, Red = Alert, Glow-in-the-dark = Extreme Warning (highest).
3. Roll message up. Open the **TIP** of the Dart and insert message into tip. Close Dart (Fig. 2).

## LOAD DART & LAUNCH

1. Insert Dart into **LAUNCHER TUBE** (Fig. 1).
2. Aim Launcher by sighting target through **AIMING SCOPE**.

**IMPORTANT: NEVER SHOOT DARTS TOWARD ANYONE'S FACE.**

3. Hold the Air Launcher tightly with one hand and strike the **AIR TRIGGER** with the palm of the other hand (Fig. 3).
4. **SUCTION CUP TIPS** of darts will stick to most smooth, flat surfaces such as walls and windows. Moisten the cup for extra stick on smooth surfaces.


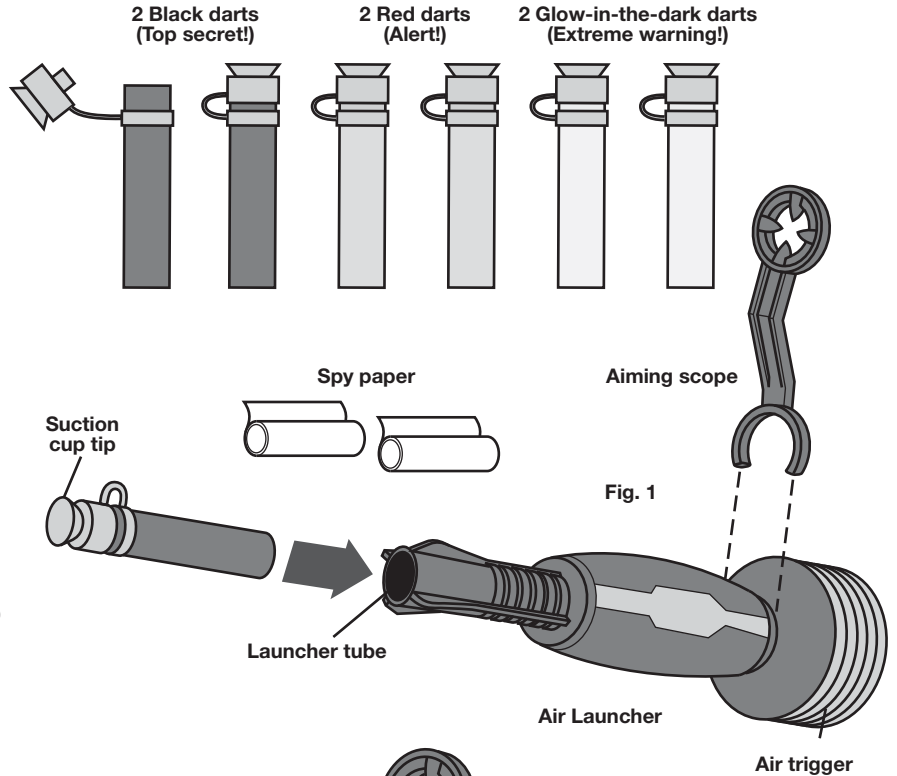


Fig. 1

Fig. 3

Fig. 2

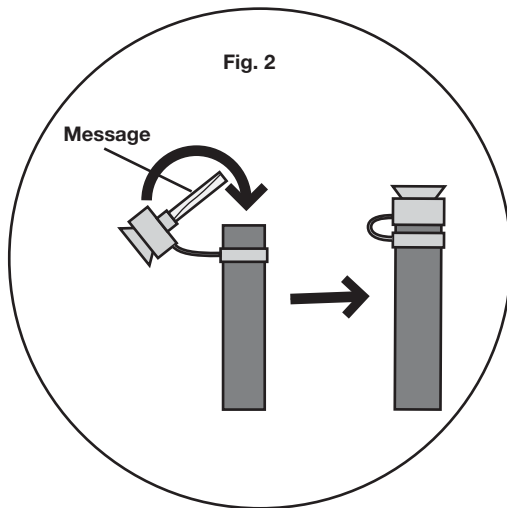

**CAUTION:** To avoid injury, do not aim at eyes or face. Use only darts designed for this product. Do not modify darts or dart launcher.



MESSAGE LAUNCHER 70155-4000 PR 9/06  
IF YOU HAVE ANY QUESTIONS, PLEASE CONTACT US AT  
1-800-247-6570  
WWW.WILDPLANET.COM/HELP  
Wild Planet Entertainment, Inc., P.O. Box 194087  
San Francisco, CA 94119-4087

© 2006 Wild Planet Entertainment, Inc., San Francisco, CA 94104, USA. All rights reserved. **PRINTED IN CHINA.**  
Product specifications subject to change.