



Ages 8 and Up
48027

Requires 2 AA (LR06)
batteries, not included.

Important: Please save this instruction sheet. It contains valuable product information.

ADULTS: INSTALLING BATTERIES

Locate battery door on bottom of unit, use small Philips screwdriver to loosen screw, remove battery door. (Fig. 1) Install 2 fresh, new AA batteries. Replace door.

Important: Observe battery polarity (direction, + and -)

OPERATION

Slide **ON/OFF/VOLUME SWITCH** to the ON position and start playing music.

PRESS AND SHAKE SONGS

Press button **A** or **B** with your index finger while shaking Bop-A-Loopa sharply to play "Shout" or "Whip It" with stops, starts and repeats for cool DJ effects. Each time you shake the music stick, the song starts again from the beginning. You can combine "Shout" and "Whip It" with each other, or with the Press and Play songs.

PRESS AND PLAY SONGS

By pressing different combinations of buttons **C**, **D** and **E**, up to seven different musical clips, riffs and beats can be played.

- C** 99 Red Balloons
- D** Hungry Like the Wolf
- E** Walking on Sunshine
- C + D** Rio
- C + E** She Drives Me Crazy
- D + E** Every Little Thing She Does Is Magic
- C + D + E** Do You Really Want to Hurt Me?

CONTROLLING THE LIGHT SHOW

Press the **LIGHT SHOW/V-BUTTON** on the back of the unit to play light effects. Each time you press and hold the button, a light show pattern will be played randomly. You can stop the light show by releasing the button.

CHANGING THE VOLUME

Slide On/Off/Volume switch to the highest position to enter the volume control mode. You can set the volume by one of the methods described below:

1. Pressing V-button repeatedly – buttons A - E will light from bottom to top. The more lights are lit, the higher the volume. OR,
2. Press A, B, C, D or E directly to choose the desired volume level. A is the loudest, E the softest.

Once you have set the volume to the desired level, slide ON/OFF/VOLUME to the ON position and continue playing.

SLEEP MODE

The unit will go into sleep mode if it is left idle for 10 seconds in order to preserve battery life. You can always wake the unit up by pressing any button while in sleep mode. Once awake, a light show will play.






RESETTING THE UNIT

If the unit malfunctions, an adult should use a pointed object to press RESET, or remove batteries from battery compartment and reinstall them.

WARNING: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

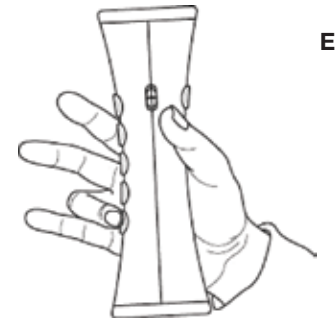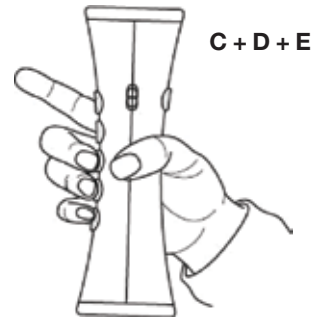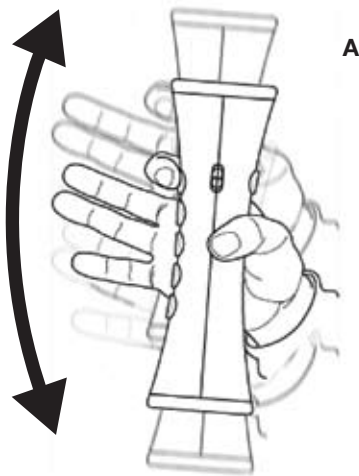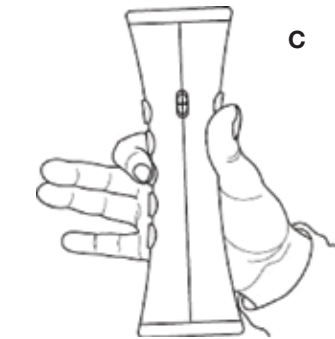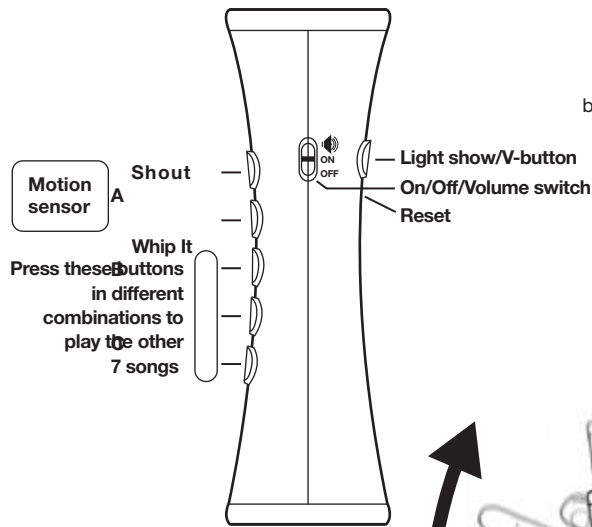

BATTERY SAFETY

Only adults should install and replace batteries. Do not recharge non-rechargeable batteries. Remove dead or exhausted batteries. Insert batteries correctly. Match positive and negative signs. The supply terminals are not to be short circuited. Do not use rechargeable batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries. Do not mix old and new batteries. Only the batteries of the same or equivalent type recommended to be used. Do not dispose of batteries in a fire; they may explode. Dispose of batteries safely.

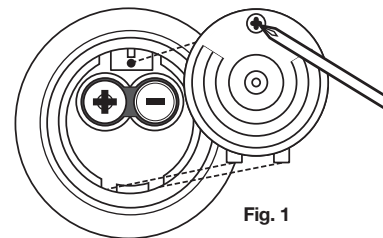


Fig. 1

All compositions under license from EMI Music Publishing Ltd. All tracks are re-recorded and do not feature the original artists.



BOP-A-LOOPA 48027-4000 PR 6/07

IF YOU HAVE ANY QUESTIONS, PLEASE CONTACT US AT
1-800-247-6570
WWW.WILDPLANET.COM/HELP
Wild Planet Entertainment, Inc., P.O. Box 194087
San Francisco, CA 94119-4087

© 2007 Wild Planet Entertainment, Inc., San Francisco, CA 94104, USA. All rights reserved. **PRINTED IN CHINA.** Product specifications subject to change.